



MODEL NO: CVPW

PART NO: 6499644

Weak Chemical Vane Pump

INTRODUCTION

Thank you for purchasing this CLARKE vane pump,

Suitable for use with weak corrosive chemicals such as weak acid, alkali and water based chemicals

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully.



WARNING: THIS PRODUCT IS NOT SUITABLE FOR USE WITH FLUIDS FOR HUMAN CONSUMPTION OR AQUEOUS FLUIDS. THIS PRODUCT SHOULD NOT BE USED FOR FLUID TRANSFER INTO AIRCRAFT.

SAFETY

To ensure safe and efficient operation, it is essential to read and follow each of these warnings and precautions.

1. When used to pump flammable liquids, improper use or installation of this product can cause serious bodily injury or death.
2. Do NOT smoke near the pump or use the pump near an open flame. Fire could result.
3. When pumping flammable liquids, all equipment must be grounded to prevent the build up of static electricity which may ignite vapours or gases.

SPECIFICATIONS

Barrel Adaptor Size	2" BSP	Outlet Tube Diameter	19 mm
Max Flow	0.35l per rotation	Dims (WxDxH)	215 x 270 x 1325 mm
Inlet Tube Diameter	27 mm	Product Weight	1.9 kg

GUARANTEE



This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

ASSEMBLY

WHAT IS SUPPLIED	ASSEMBLED
 <p>Diagram showing the components supplied for assembly:</p> <ul style="list-style-type: none">SpoutFilterPTFE TapeCollarPump UnitHandleInlet Tubes	

FITTING THE PUMP TO A BARREL

1. Assemble the pump using the required number of inlet tubes. Use the PTFE tape at all connections
 - The tube which contains the black filter + mesh should be at the bottom.
2. Screw the collar into the threaded opening of the barrel.
3. Raise or lower the inlet tube so that it is just off of the bottom of the barrel when fitted.

USING THE PUMP

1. Make sure all connections are secure and place a suitable container under the spout.
2. Rotate the handle to draw fluid from the barrel.
 - The first time you use the pump, liquid should begin flowing after several turns of the handle

MAINTENANCE

CLEANING THE INLET FILTER

1. Unscrew the inlet filter from the bottom of the inlet tube and clear away any debris it has trapped.
2. Replace the filter.



CAUTION: DO NOT USE THE PUMP WITHOUT THE FILTER IN PLACE.

CHEMICAL RESISTANCE TABLE

- Room Temperature
- % Say Mass Concentration

WATER	ACIDS	ALKALI	PETROLEUM BASED	HALOGENS	ALCOHOL	THINNER
Sea Water	Acetic Acid 20%	Potassium Hydroxide 25%	Silicone Oil	Calcium Chloride 10%	Ethanol 96%	Acetone
	Boric Acid 10%	Sodium Hydroxide solution 50%		Copper Sulphate	Glycerine	
	Citric Acid 10%			Potassium Dichromate 10%	Isopropanol	
	Hydraulic Acid 35%			Soap Solution	Methanol	
	Lactic Acid 80%			Sodium Chloride 10%	Propanol	
	Nitric Acid 10%			Sodium Nitrate 10%		
	Oxalic Acid 50%			Sodium Thiosulphate		
	Phosphoric Acid 50%			Zinc Chloride 10%		
	Sulphuric Acid 70%					

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com