

Clarke®



185MM CIRCULAR SAW MODEL NO: CCS185B

PART NO: 6462310

OPERATION & MAINTENANCE INSTRUCTIONS



ORIGINAL INSTRUCTIONS

LS0720 - ISS 3

INTRODUCTION

Thank you for purchasing this CLARKE 185mm Circular Saw.

Read this manual fully before you use this product and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission. This guarantee does not effect your statutory rights.

SPECIFICATIONS

Model Number	CCS185B
Rated Voltage	230V~50Hz
Power Input	1200 W
No Load Speed	4800 RPM
Maximum Depth of Cut	65 mm @ 90° - 44 mm @ 45°
Blade Dimensions	185 mm Ø x 16 mm Bore
Sound Pressure Level LpA	90.8 dB(A)
Sound Power Level LWA	101.8 dB(A)
Uncertainty Factor (K)	3 dB(A)
Weight	3.95 kg
Vibration (main handle)	2.281 m/s ² Uncertainty Factor 1.5
Dimensions (L x W x H)	292 mm x 235 x 239 mm

POWER TOOL SAFETY WARNINGS

WORK AREA

1. **Keep the work area clean and well lit.** Cluttered and dark areas invite accidents.
2. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
3. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

1. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use adaptor plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce the risk of electric shock.
2. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
3. **Do not abuse the cable. Never use it for carrying, pulling or unplugging the power tool. Keep the cable away from heat, oil, sharp edges or moving parts.** Damaged or entangled cables increase the risk of electric shock.
4. **When operating a power tool outdoors, use an extension cable suitable for outdoor use.** Use of a cable suitable for outdoor use reduces the risk of electric shock
5. **If operating the power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**

PERSONAL SAFETY

1. **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in personal injury.
2. **Use safety equipment. Always wear eye protection.** Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
3. **Avoid accidental starting.** Make sure that the switch is in the off position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
4. **Remove any wrench before turning the power tool on.** A wrench left attached to a rotating part may result in personal injury.
5. **Do not overreach.** Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
6. **Dress properly.** Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

POWER TOOL USE AND CARE

1. **Do not force the power tool.** Use the correct accessories for your application. The correct power tool will do the job better and safer at the rate which it was designed for.
2. **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. **Disconnect the plug from the power source before changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. **Store idle tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate it.** Power tools are dangerous in the hands of untrained users.
5. **Maintain power tools.** Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
6. **Use the power tool and accessories in accordance with these instructions and in the manner intended, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from intended could result in a hazardous situation.
7. The performance of this tool may vary, depending upon variations in line voltage. Extension cable usage may also affect performance.

SERVICE

1. **Have your power tool serviced by qualified service personnel using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

SAFETY INSTRUCTIONS FOR ALL SAWS

- a. **Keep hands away from cutting area and the blade.** Keep your second hand on the auxiliary handle, or motor housing. If both hands are holding the saw, they cannot be cut by the blade.
- b. **Do not reach underneath the workpiece.** The guard cannot protect you from the blade below the workpiece.
- c. **Adjust the cutting depth to the thickness of the workpiece.** Less than a full tooth of the blade teeth should be visible below the workpiece.
- d. **Never hold the piece being cut in your hands or across your leg.** Secure the workpiece to a stable platform. It is important to support the work properly to minimise body exposure, blade binding, or loss of control.
- e. **Hold the power tool by handles when performing an operation.**
- f. **Always use blades with the correct size and shape of arbor holes.** Blades that do not match the mounting hardware of the saw will run eccentrically, causing loss of control.

- g. **Never use damaged or incorrect blade washers or bolt.** The blade washers and bolt were specially designed for your saw, for optimum performance and safety of operation.

PREVENTION OF KICKBACK

Kickback is a sudden reaction to a pinched, bound or misaligned saw blade, causing an uncontrolled saw to lift up and out of the workpiece toward the operator.

When the blade is pinched or bound tightly by the kerf closing down, the blade stalls and the motor reaction drives the unit rapidly back toward the operator.

If the blade becomes twisted or misaligned in the cut, the teeth at the back edge of the blade can dig into the top surface of the wood causing the blade to climb out of the kerf and jump back toward the operator. Kickback is the result of saw misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

- a. Maintain a firm grip with both hands on the saw and position your arms to resist kickback forces. Position your body to either side of the blade, but not in line with the blade.
- b. When the blade is binding, or when interrupting a cut for any reason, release the trigger and hold the saw motionless in the material until the blade comes to a complete stop. Never attempt to remove the saw from the work or pull the saw backward while the blade is in motion or kickback may occur. Investigate and take corrective actions to eliminate the cause of blade binding.
- c. When restarting a saw in the workpiece, centre the saw blade in the kerf and check that saw teeth are not engaged with the material. If the blade is binding, it may walk up or kickback from the workpiece as the saw is restarted.
- d. Support large panels to minimise the risk of blade pinching and kickback. Large panels tend to sag under their own weight. Supports must be placed under the panel on both sides, near the line of cut and near the edge of the panel.
- e. Blade depth and bevel adjusting locking screws must be tight and secure before making a cut. If blade adjustment shifts while cutting, it may cause binding and kickback.
- f. Use extra caution when making a "plunge cut" into existing walls or other blind areas. The protruding blade may cut objects that can cause kickback.

CIRCULAR SAW BLADE SAFETY WARNINGS

- a. The maximum speed marked on the tool shall not exceed the maximum speed marked on the blade.
- b. Cracked circular saw blades shall be scrapped (repairing is not permitted). Composite (tipped) circular saw blades, where the tip dimension is reduced to less than 1 mm, shall be taken out of service.
- c. Fastening screws and nuts shall be tightened using the tools supplied.
- d. Clamping surfaces shall be cleaned to remove dirt, grease, oil and water.
- e. Do not use loose rings or bushes to "make up" bore sizes on circular saw blades.

EXPLANATION OF SYMBOLS & PICTOGRAMS



Read Instruction Manual Before Use



Wear Eye Protection



Wear Gloves

ELECTRICAL CONNECTIONS



WARNING: READ THESE ELECTRICAL SAFETY INSTRUCTIONS THOROUGHLY BEFORE CONNECTING THE PRODUCT TO THE MAINS SUPPLY.

Before switching the product on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 230VAC 50Hz. Connecting it to any other power source may cause damage.

This product may be fitted with a non-rewireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.

If the plug has to be changed because it is not suitable for your socket, or due to damage, it should be cut off and a replacement fitted, following the wiring instructions shown below. The old plug must be disposed of safely, as insertion into a mains socket could cause an electrical hazard.




**WARNING: THE WIRES IN THE POWER CABLE OF THIS PRODUCT ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:
BLUE = NEUTRAL BROWN = LIVE**

If the colours of the wires in the power cable of this product do not correspond with the markings on the terminals of your plug, proceed as follows.

- The wire which is coloured **Blue** must be connected to the terminal which is marked **N** or coloured **Black**.
- The wire which is coloured **Brown** must be connected to the terminal which is marked **L** or coloured **Red**.

Plug must be BS1363/A approved.

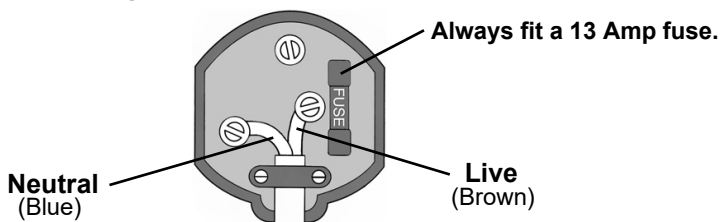


Make sure that the outer sheath of the cable is firmly held by the clamp

We strongly recommend that this machine is connected to the mains supply via a Residual Current Device (RCD)



This symbol indicates that this is a Class II product, and does not require an earth connection.

PART IDENTIFICATION.

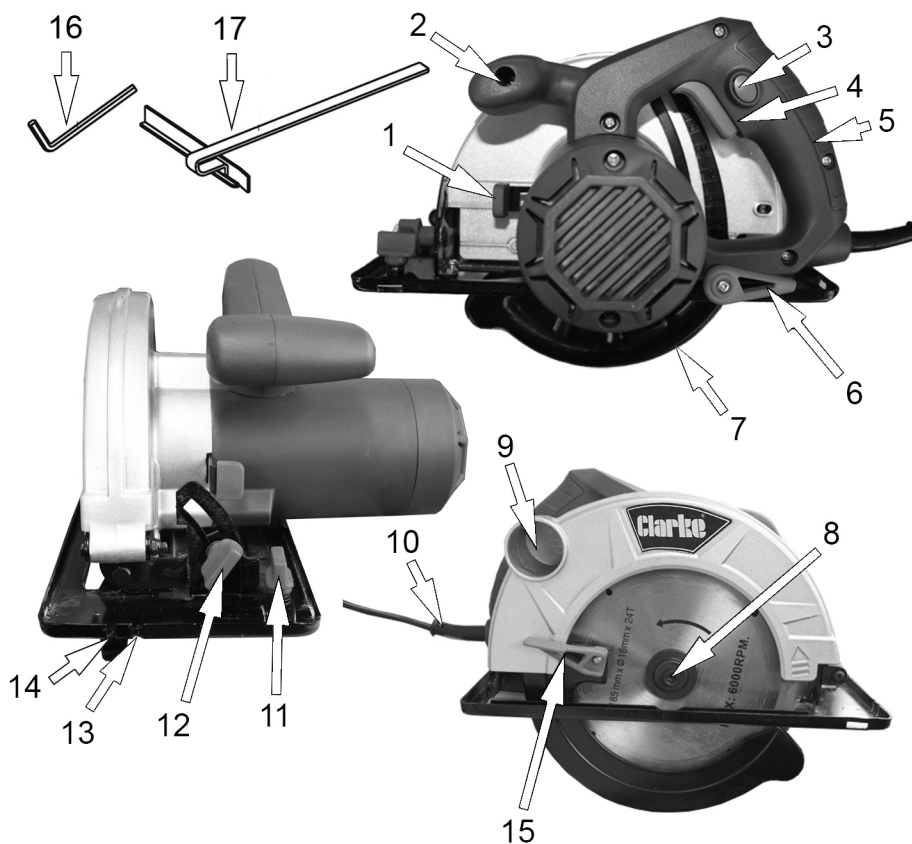

1	Blade Lock	10	Mains Lead
2	Auxiliary Handle	11	Parallel Guide Locking Screw
3	Safety Lock Button	12	Bevel Adjustment Knob
4	On/Off Trigger	13	Mark For Bevel Cut
5	Handle	14	Mark For Straight Cut
6	Depth Adjustment Lever	15	Lower Guard Retracting Lever
7	Lower Guard	16	Hexagon Key
8	Blade Clamping Screw	17	Parallel Guide
9	Dust Extraction Outlet		

CARTON CONTENTS

The following items should be supplied in the carton. If any parts are missing or damaged, please contact the Clarke dealer where you purchased the tool.


- 1 x 1200 Watt Circular Saw.
- 1 x 185 mm Ø x 16 mm Bore x 24 Tooth TCT blade.(assembled on tool).
- 1 x Parallel Fence.
- 1 x 6 mm Hexagon Key.

ADJUSTMENTS

DEPTH OF CUT ADJUSTMENT


1. Loosen the depth adjustment lever.
2. Adjust the base plate until the required depth of blade is protruding through the base plate.
3. Tighten the depth adjustment lever.

NOTE: For optimum results, a full tooth should just be visible below the workpiece.

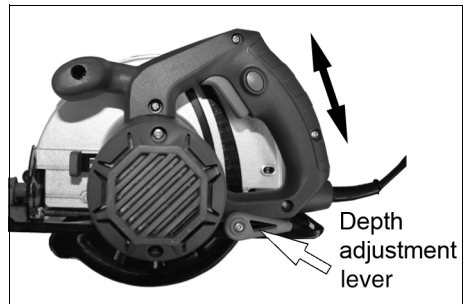

BEVEL ADJUSTMENT

1. Loosen the bevel locking knob.
2. Adjust the base plate to the required angle (max 45°)
 - Use the bevel scale as a guide only, for accurate angles use a protractor.
3. Tighten the bevel adjustment knob to lock the base at the required angle.

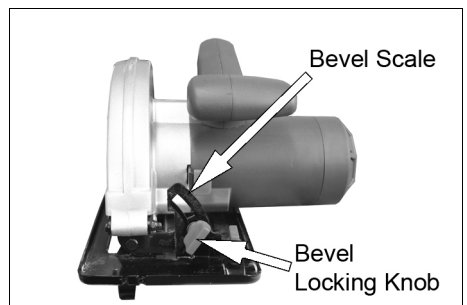


MOUNTING AND USING THE PARALLEL GUIDE

MOUNTING

1. Slide the parallel guide into the base plate as shown.
2. Secure in place using the parallel guide locking screw.

ADJUSTING


1. Loosen the Parallel Guide Locking Screw.
2. Adjust the Parallel Guide to the required length.
 - There is a scale on the parallel guide that can be used to give an approximate guide. Always double check using an accurate ruler.
3. Tighten the Parallel Guide Locking Screw to secure the parallel guide in position.

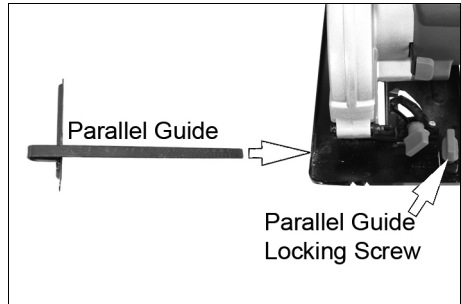

DUST EXTRACTION

The circular saw can be connected to a dust extraction system, using a suitable hose adaptor (not supplied).

- The internal diameter of the dust extraction outlet is 30 mm.

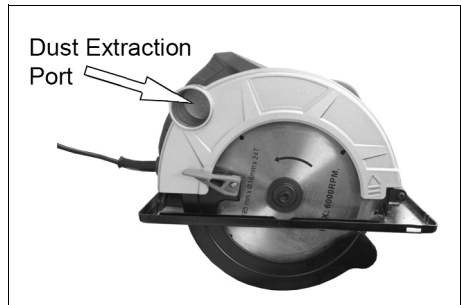

OPERATION & USE

CORRECT HAND POSITION


For your own safety, always hold the circular saw as shown in this picture, with one hand on the main handle and the other on the auxiliary handle.



SWITCHING ON/OFF

The on/off trigger is fitted with a safety button which prevents the circular saw from being started accidentally. To start the saw:


1. Press and hold the safety button.
2. Squeeze the on/off trigger at the same time.
3. Release the on/off trigger to stop the saw.
 - The blade will continue to rotate for several seconds after the trigger has been released.

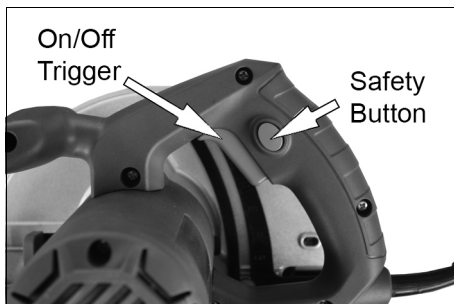

GUIDING THE CIRCULAR SAW

To achieve optimal results:

- Clamp the workpiece upside down to minimise breakout.
- Follow the line drawn on the workpiece using the 90° mark.
- If cutting a bevel angle of 45°, follow the line drawn on the workpiece using the 45° mark.

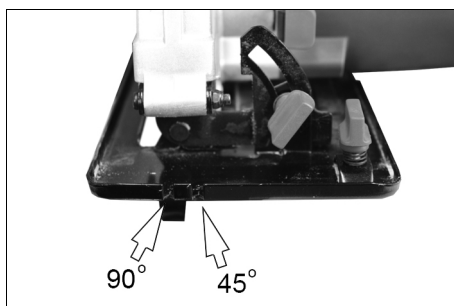

MAINTENANCE




WARNING: DISCONNECT THE CIRCULAR SAW FROM THE MAINS SUPPLY BEFORE FITTING REPLACEMENT BLADES, CLEANING OR ADJUSTMENT.


Keep the machine clean by wiping off dust with a clean cloth.

BLADE REPLACEMENT

1. Press and hold the blade lock and remove the blade clamping screw using the hexagon key supplied by turning it anti-clockwise.
 - The blade will rotate until the blade lock is fully engaged.

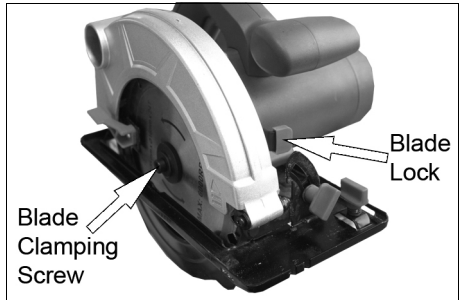


2. Retract the lower blade guard using the retracting lever and replace the blade.
 - Make sure you pay attention to the blade direction marking on the blade.
 - Spare blades are available from your local Clarke dealer.

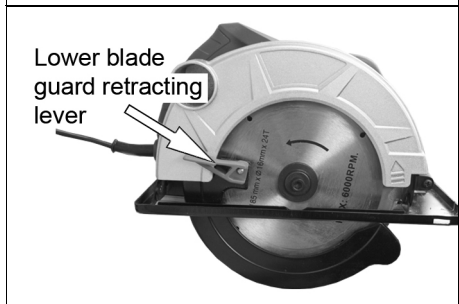

3. Replace the blade clamping screw by hand until it is holding the blade in position.
4. Press and hold the blade lock and turn the blade by hand until the blade lock is fully engaged.
5. Tighten the blade clamping screw using the hexagon key supplied.

PARTS DIAGRAM

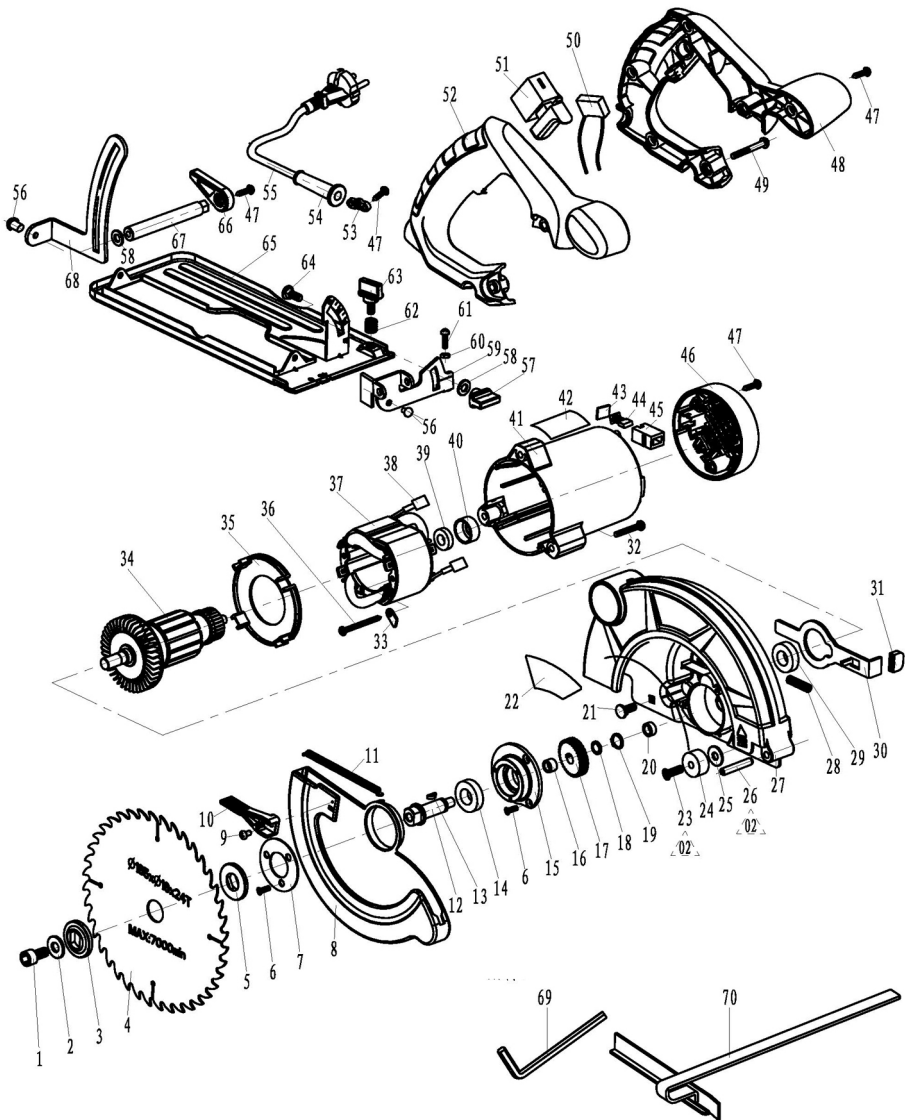

PARTS LIST

1	Screw M8 x 16	HTCCS185B01
2	Washer	HTCCS185B02
3	Outer Retaining Disc	HTCCS185B03
4	Saw Blade	HTCCS185B04
5	Clamping Disc	HTCCS185B05
6	Screw M4 x 10	HTCCS185B06
7	Lower Guard Disc	HTCCS185B07
8	Lower Hinged Guard	HTCCS185B08
9	Screw M4 x 8	HTCCS185B09
10	Guard Retracting Trigger	HTCCS185B10
11	Reset Spring	HTCCS185B11
12	Output Shaft	HTCCS185B12
13	Woodruff Key	HTCCS185B13
14	Bearing 6001-2RS	HTCCS185B14
15	Front Cover	HTCCS185B15
16	Positioning Steel Bush	HTCCS185B16
17	Drive Gear	HTCCS185B17
18	Flat Washer	HTCCS185B18
19	Washer	HTCCS185B19
20	Oillite Bearing	HTCCS185B20
21	Screw M6 x 16	HTCCS185B21
22	Logo Sticker	HTCCS185B22
23	Screw M5	HTCCS185B23
24	Washer	HTCCS185B24
25	Flat Washer	HTCCS185B25
26	Roll Pin 6 x 35	HTCCS185B26
27	Upper Blade Cover	HTCCS185B27
28	Compression Spring	HTCCS185B28
29	Bearing 6000-2RS	HTCCS185B29
30	Blade Lock Arm	HTCCS185B30
31	Blade-locking Button	HTCCS185B31
32	Screw M5 x 35	HTCCS185B32
33	Tab	HTCCS185B33
34	Armature	HTCCS185B34
35	Draft Shield	HTCCS185B35
36	Screw	HTCCS185B36

37	Stator	HTCCS185B37
38	Square Connecting Spade	HTCCS185B38
39	Bearing 607-2RS	HTCCS185B39
40	Bearing Sleeve	HTCCS185B40
41	Housing	HTCCS185B41
42	Label	HTCCS185B42
43	Carbon Brush Cover	HTCCS185B43
44	Carbon Brush	HTCCS185B44
45	Carbon Brush Holder	HTCCS185B45
46	Rear Cover	HTCCS185B46
47	Screw	HTCCS185B47
48	Left Handle Moulding	HTCCS185B48
49	Screw	HTCCS185B49
50	Capacitor	HTCCS185B50
51	Switch	HTCCS185B51
52	Right Handle Moulding	HTCCS185B52
53	Cable Clamp	HTCCS185B53
54	Cable Protector	HTCCS185B54
55	Power Cable	HTCCS185B55
56	Rivet	HTCCS185B56
57	Locking Knob	HTCCS185B57
58	Flat Washer	HTCCS185B58
59	Bevel Control Lever	HTCCS185B59
60	Nut M4	HTCCS185B60
61	Screw M4 x 10	HTCCS185B61
62	Compression Spring	HTCCS185B62
63	Parallel Guide Locking Nut	HTCCS185B63
64	Square Neck Bolt	HTCCS185B64
65	Sole Plate	HTCCS185B65
66	Depth Adjustment Lever	HTCCS185B66
67	Depth Adjusting Lock Rod	HTCCS185B67
68	Depth Adjusting Frame	HTCCS185B68
69	Hex Wrench 6mm	HTCCS185B69
70	Parallel Guide	HTCCS185B70

DECLARATION OF CONFORMITY



Clarke[®]
INTERNATIONAL

Hemnall Street, Epping, Essex CM16 4LG

DECLARATION OF CONFORMITY

This is an important document and should be retained.

We hereby declare that this product(s) complies with the following directive(s):

- 2014/30/EU *Electromagnetic Compatibility Directive.*
2006/42/EC *Machinery Directive.*
2011/65/EU *Restriction of Hazardous Substances, (amended by 2015/863).*

The following standards have been applied to the product(s):

- EN 55014-1:2017, EN 55014-2:2015, EN 61000-3-2:2019, EN 61000-3-3:2013+A1:2019,
EN 62841-1:2015, EN 62841-2-5:2014.*

The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the aforementioned directive(s) has been compiled and is available for inspection by the relevant enforcement authorities.

The CE mark was first applied in: 2012

Product Description: 185mm Circular Saw
Model number(s): CCS185B
Serial / batch Number: N/A
Date of Issue: 15/07/2020

Signed:

J.A. Clarke
Director

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS



AIR COMPRESSORS
From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS
Prime duty or emergency standby for business, home and leisure.

POWER WASHERS
Hot and cold, electric and engine driven - we have what you need

WELDERS
Mig, Arc, Tig and Spot.
From DIY to auto/industrial.

METALWORKING
Drills, grinders and saws for DIY and professional use.

WOODWORKING
Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS
Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS
Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS
Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS
All sizes for car and commercial use.



PARTS & SERVICE: 0208 988 7400

Parts Enquiries
Parts@clarkeinternational.com

Servicing & Technical Enquiries
Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com