



**HEAVY DUTY INDUSTRIAL TOOL STORAGE**


# UNPACKING AND ASSEMBLY INSTRUCTIONS

Thank you for purchasing your new Clarke Tool Storage Unit Mobile Cabinet. Below you will find some useful assembly information.


Included with your Tool Storage Unit you will find the following.

1. Side mounted handle - One handle is included with each Storage Unit. The Handle and its mounting hardware is located inside one of the drawers, The handle may be mounted to either side of the unit, depending upon where you intend to position it in your work area. Make sure that the swivel castors are installed on the same side of the unit as the handle, to make steering easier,
2. Castors - Your Storage Unit includes castors which need to be installed. You will find the castors and castor mounting hardware located in a cardboard box inside one of the drawers of the Unit

- If your Storage unit castor mounting hardware includes flat washers, install as illustrated in Fig 1. Carefully turn Storage Unit upside down. Line up castor plate with the threaded holes in bottom of unit. Slide bolt through washer, castor plate and into Storage Unit, Tighten with spanner. Repeat for remaining bolts and castors.

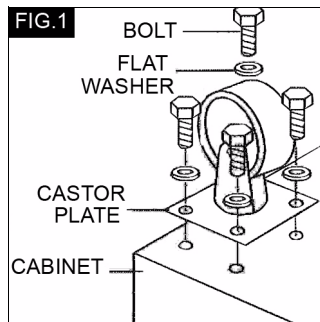

- If your Tool Storage Unit castor mounting hardware includes spacers, install as illustrated in Fig 2. Carefully turn the unit upside down. Line up the spacers with the threaded holes in bottom of unit.

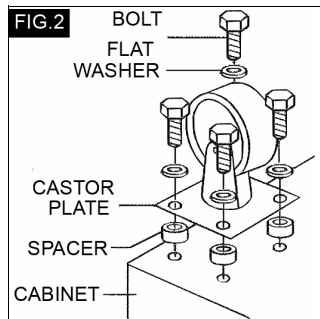

Line up castor plate on top of spacers and insert bolts through castor plate, spacers and threaded holes of Storage Unit. Tighten with spanner. Repeat for remaining bolts and castors.



Clarke HD Plus Tool Storage Units include Ball Bearing Drawer Slides and foam drawer liners.

Drawers can be removed following these easy steps:

1. Press lever on left side of drawer DOWN, Press lever on right side of drawer UP



2. With levers pressed as described In step 1, pull drawer from Tool Storage Unit,

When replacing drawer, be sure to fully close to reset the levers,

Your Clarke Tool Storage Unit is designed for years of trouble free service There is little or no maintenance needed.

The Ball Bearing Drawer Slides can be easily lubricated, if necessary, by spraying lubricant, such as white lithium grease, into openings, as indicated below.

