

ClarkeTM

HEALTH and SAFETY



MODEL:CMP10
PART NUMBER4560600

Your CLARKE Megaphone is ideal for use on construction and demolition sites, sports fields, rowing, outdoor events and fire drills etc.

Uses 4 X D (HP2) Size Batteries (Not Supplied), Rechargeable batteries are not recommended for use in your megaphone.

Features

Siren, Volume Control, Folding handle and shoulder Strap.

Specifications

Horn Diameter 155mm
Length 260mm
Wattage 10w
Range 200metres
Net Weight inc Batteries 1Kg

CLARKE GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.




Battery Replacement

To fit new batteries, proceed as follows:

1. Push in the lid release button, see fig 1, and lift up the lid.
2. Insert new batteries, ensuring the correct polarity, see fig. 2.
3. Close the lid, ensure it is latched securely,

To replace the batteries at the end of their life continue with 1 above. Remove old batteries and dispose of according to local authority regulations, continue with 2 & 3.

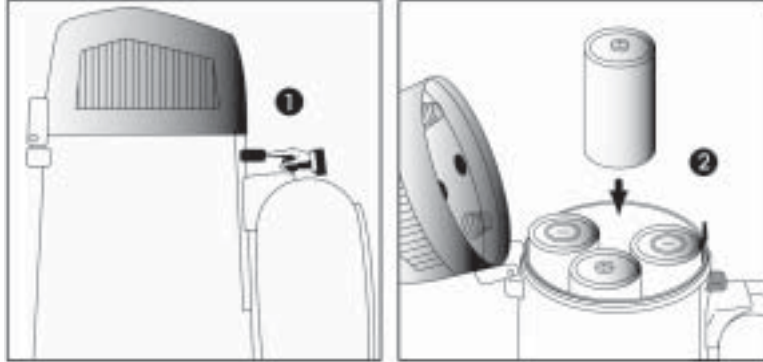

Operation

When using the megaphone, **ALWAYS** consider others around you and **NEVER** operate when close to people or animals.


To operate siren:

1. Turn the volume down by sliding the volume control fully to the left.
2. Push ON/Off button in.
3. Push the Siren/Speak button in.
4. Slowly raise the volume by slowly sliding the volume control to the right until the desired volume is reached.

Switch OFF after use.

To operate as a public address system

1. Turn The volume down, as above.
2. Ensure the Siren/Speak button is in the speak position (OUT).
3. Lift the megaphone up to your mouth and hold it so that the microphone is approx 2" away.
4. Aim the megaphone in the direction required.
5. Push the ON/OFF button in, speak clearly and concise into the microphone, slowly pushing the volume control to the right until the desired volume is reached.

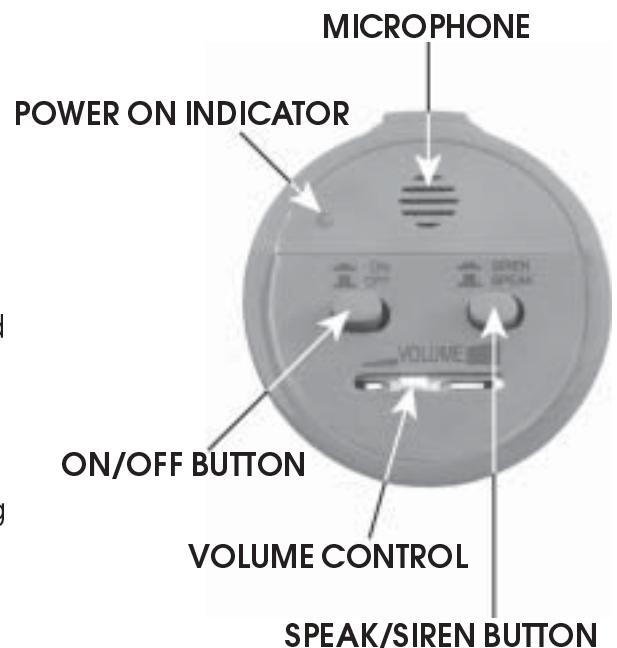

To keep your megaphone clean, wipe with a damp cloth only, DO NOT use detergents or harmful abrasives.

Remove the batteries, if the megaphone is not to be used for long periods to prevent damage from leaking batteries.