

# Clearflex®



## FOLDING TABLES

Models: HDT855 & HDT1200

Part Nos: 3501035 & 3501030

## ASSEMBLY INSTRUCTIONS

Please keep these instructions in a safe place for future reference.

## INTRODUCTION

Thank you for purchasing this CLARKE product. Before use be sure to read these instructions thoroughly. In doing so you will ensure the safety of yourself and of others around you, and you can look forward to the product giving you long and satisfactory service.

## GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase. This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission. This guarantee does not effect your statutory rights.

## SPECIFICATIONS

	HDT855	HDT1200
Weight	9.45 kg	9.25 kg
Dimensions (l x w x h) mm	867 x 867 x 739 mm	1225 x 613 x 735 mm
Max Load Capacity	125 kg	125 kg

## SAFETY PRECAUTIONS

Failure to comply with these warnings could result in serious personal injury or property damage.

1. Do not exceed the load capacity of the table. (Maximum load 100 kg).
2. Do not stand on the table. Falling could result in personal injury.
3. Do not put hot dishes or items (over 100°C) directly on the table.
4. Do not position close to naked flames or sources of ignition.

## USING THE 855 TABLE

 
1. Lay the top face down on a soft surface to protect the top from scratches.
2. Unfold the legs completely by placing one foot on the table as shown and pulling the legs towards you as in Fig 1.
3. Pull the legs until they form a right angle with the table top.




4. Ensure that the arms are straight and that locking tabs engage with the slots in the corresponding arm member as shown in Fig 2.



**CAUTION: TAKE CARE NOT TO PINCH YOUR FINGERS BETWEEN THE HINGED ARM COMPONENTS WHERE SHOWN IN FIG 2.**


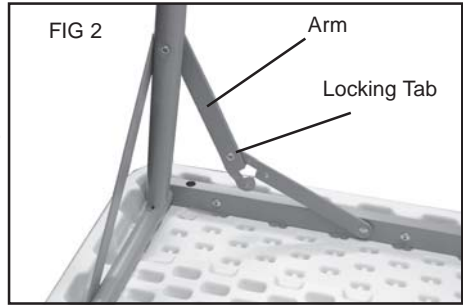


 5. When folding the table away, the legs, which are retained by the spring clip must be folded last, as these will retain the first pair of legs as in Fig 3.
6. Store the table on its side – avoid laying flat, or under heavy pressure.

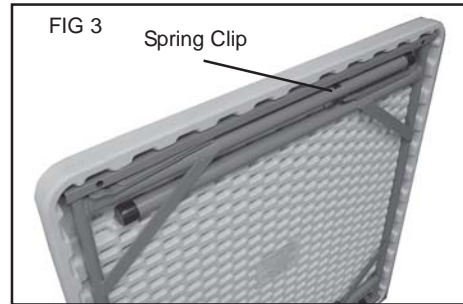

## USING THE 1200 TABLE

  1. Lay the table with the legs up and completely unfold them.
2. Pull the legs until they form a right angle with the table top before turning the table over.
3. Ensure that the metal rings slide down into position as in Fig 4, to prevent the hinged leg assemblies from folding in inadvertently.
4. When folding the table away, ensure the legs are retained by the spring clips shown in Fig 5.
5. Store the table on its side – avoid laying flat, or under heavy pressure

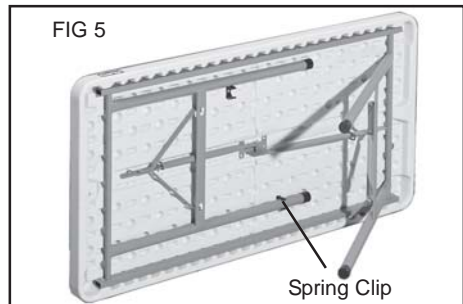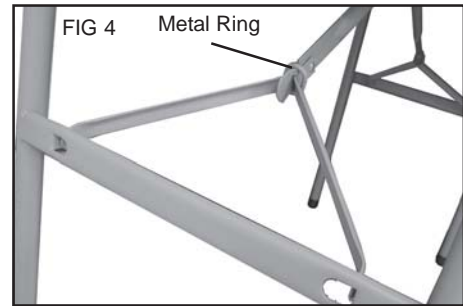

## ENVIRONMENTAL PROTECTION



Do not dispose of this product or any unwanted materials with general household waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment.

# A SELECTION FROM THE VAST RANGE OF

# Clarke®

## QUALITY PRODUCTS

### AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

### GENERATORS

Prime duty or emergency standby for business, home and leisure.

### POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

### WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

### METALWORKING

Drills, grinders and saws for DIY and professional use.

### WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

### HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

### WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

### POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

### STARTERS/CHARGERS

All sizes for car and commercial use.



**PARTS & SERVICE: 020 8988 7400**

**E-mail: [Parts@clarkeinternational.com](mailto:Parts@clarkeinternational.com) or [Service@clarkeinternational.com](mailto:Service@clarkeinternational.com)**

**SALES: UK 01992 565333 or Export 00 44 (0)1992 565335**

**Clarke** INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG  
[www.clarkeinternational.com](http://www.clarkeinternational.com)