

ALUMINIUM FOLDING SACK TRUCKS

Models CSTF4, 5B & 6 Part Nos 6500790, 6500796 & 6500794

USER INSTRUCTIONS

INTRODUCTION

Thank you for purchasing this CLARKE Folding Sack Truck.

Before attempting to use this product, it is essential that you read this manual thoroughly and carefully follow all instructions given. In doing so you will ensure the safety of yourself and that of others around you, and you can also look forward to the product giving you long and satisfactory service.

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

ENVIRONMENTAL PROTECTION



Do not dispose of this product with general household waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of appropriately.

TECHNICAL SPECIFICATIONS

Feature	Specification			
		CSTF4	CSTF5B	CSTF6
Maximum Capacity		60 kg	90 kg	200 kg
Dimensions (L x D x H) mm	open	420 x 400 x 1000	445 x 500 x 980	600 x 590 x 1270
	folded	385 x 55 x 635	500 x 60 x 730	590 x 90 x 1010
Weight		3 kg	4.5 kg	9.5 kg

Please note that the details and specifications contained herein, are correct at the time of going to print. However, CLARKE International reserve the right to change specifications at any time without prior notice.





SAFETY PRECAUTIONS

- 1. Keep the work area tidy & well lit.
- 2. Keep children and visitors away from the work area.
- 3. Never carry out any alterations or modifications to this product.
- 4. Do not exceed the stated capacity of the truck.
- 5. Load the platform evenly with the centre of gravity of the load over the centre of the platform.
- 6. Do not bounce the truck over rough ground, or down curbs etc. Use ramps wherever possible.
- 7. Do not transport a tall load which may impair your forward view.
- 8. Take extra care if transporting a wide load.
- 9. Always ensure the load is stable before attempting to move the truck.
- 10. Take care that the heaviest part of a tall load is to the bottom of the truck touching the frame. When stacking loads ensure that the height of the stack does not extend above the handle.

Please keep these instructions in a safe place for future reference.

FOLDING & UNFOLDING THE TRUCK

CSTF4-to extend the handle pull the cross-beam upwards until the handle locks into position. To lower the handle, pull the cross-beam in an upwards direction and then lower. To unfold the platform, simply push it down until it snaps into place and the wheels automatically open out.

CSTF5B-press the button in the centre of the cross-beam and pull the handle upwards untill it locks into position, then unfold the platform by pushing it down and the wheels automatically open out.

CSTF6- to extend the handle, press the button in the centre of the cross-beam and pull the handle upwards until it locks into place. Then unfold the platform by pushing it down until it snaps into place and the wheels open out. For the CSTF6 model, lift and revolve the handles to the open position for use and fold away afterwards.

To fold the platform on any model, pull it up until it lies flat against the back support with the wheels automatically folded away. Then lower the handle.

STRONG-ARM



A SELECTION FROM THE VAST RANGE OF



AIR COMPRESSORS From DIY to industrial, Plus air tools, spray guns and accesories.

GENERATORS Prime duty or emergency standby for business, home and leisure.

POWER WASHERS Hot and cold, electric and engine driven - we have what you need

WELDERS Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING Drills, grinders and saws for DIY and professional use.

WOODWORKING Saws, sanders, lathes, mortisers and dust extraction.

1220

HYDRAULICS Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS All sizes for car and commercial use.

PARTS & SERVICE: 020 8988 7400 E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

CIAPER INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG www.clarkeinternational.com