

CLARKE®



LOG CART

Model LCWC

Part No: 3400187

ASSEMBLY & OPERATING INSTRUCTIONS

INTRODUCTION

Thank you for purchasing this CLARKE product. Before assembling the log cart, be sure to read these instructions thoroughly. In doing so you will ensure the safety of yourself and of others around you, and you can look forward to the product giving you long and satisfactory service.

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

SAFETY PRECAUTIONS

1. Do not exceed the capacity of the cart. **MAXIMUM TOTAL** load 100 kg.
2. Load the cart evenly with the centre of gravity of the load over the centre of the cart.
3. Do not bounce the cart over rough ground, or down curbs etc. Use ramps wherever possible.
4. Take extra care if transporting a wide load.
5. Always ensure the load is stable before attempting to move the cart.
6. Never carry out any alterations or modifications to this product.
7. **NEVER** allow people to ride on the cart.
8. Take care that the heaviest part of a tall load is at the bottom of the cart. When stacking loads, ensure that the height of the stack does not extend above the handle.
9. Do not park the cart in a location likely to cause a hazard to other people or traffic.
10. **DO NOT** park on an incline without first securely chocking the wheels.

Please keep these instructions in a safe place for future reference.

PRODUCT DETAILS

Dimensions (D x W x H)	570 x 520 x 1075 mm
Weight	8 kg

UNPACKING

Before assembling, please check contents against the following list and advise your dealer immediately if any parts are missing.

Handle Section,

2 x Support Sections,

Log Retainer Section,

2 x Wheels,

Axle,

4 x split pins,

2 x Washers,



4 x bolts/nuts

ASSEMBLY

1. Assemble the frame by bolting the four sections together as shown in Fig 1. Always assemble with the heads of the bolts on the outside face of the cart.

Note that the longer (handle) section is fitted closest to the axle support tubes.

2. Insert the axle into the axle support tubes and secure with two split pins as shown in Fig 2.
3. Fit the wheels to each end of the axle and secure with the washers and split pins as shown in Fig 3.

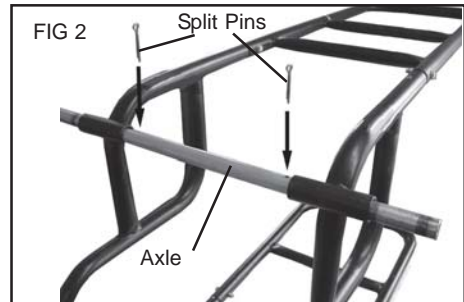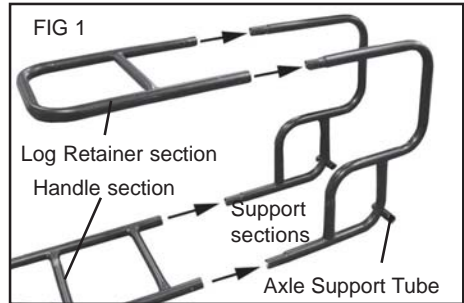

USING THE LOG CART

Always follow the safety precautions and ensure that the load does not exceed the maximum working load of 100kg.

Always ensure the tyres are inflated to the correct pressure of 30 psi before use.

Cover the load for added stability with the cover provided.



SPARE PARTS

Replacement parts are available from your Clarke dealer. Please quote part numbers:

HTLCWC01: 10" dia Pneumatic tyre (3.50n section/4-ply)

HTLCWC02: Canvas cover

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 020 8988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com