



MODEL NO: CDDFTP

PART NO: 6499680

Fuel Transfer Pump

INTRODUCTION

Thank you for purchasing this CLARKE Double Diaphragm Fuel Transfer Pump,

This pump is designed for use with non-corrosive petroleum based products of light to medium viscosity such as petrol, diesel, fuel oil and motor oils. It should not be used with solvents, acids, alkalis, or other corrosive liquids

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully.

SAFETY

To ensure safe and efficient operation, it is essential to read and follow each of these warnings and precautions.

1. When used to pump flammable liquids, improper use or installation of this product can cause serious bodily injury or death.
2. Do NOT smoke near the pump or use the pump near an open flame. Fire could result.
3. When pumping flammable liquids, all equipment must be grounded to prevent the build up of static electricity which may ignite vapours or gases. The pump and containers should be connected using bonding clamps or clips and a conductive wire no smaller than 12 gauge. A secure and positive metal to metal contact must be made. The other end of the wire should be attached to a good ground, such as a steel building column or water pipe.

SPECIFICATIONS

Barrel Collar Size	2" BSP	Outlet Tube Diameter	27 mm
Inlet Tube Diameter	26 mm	Product Weight	5.6 kg

GUARANTEE

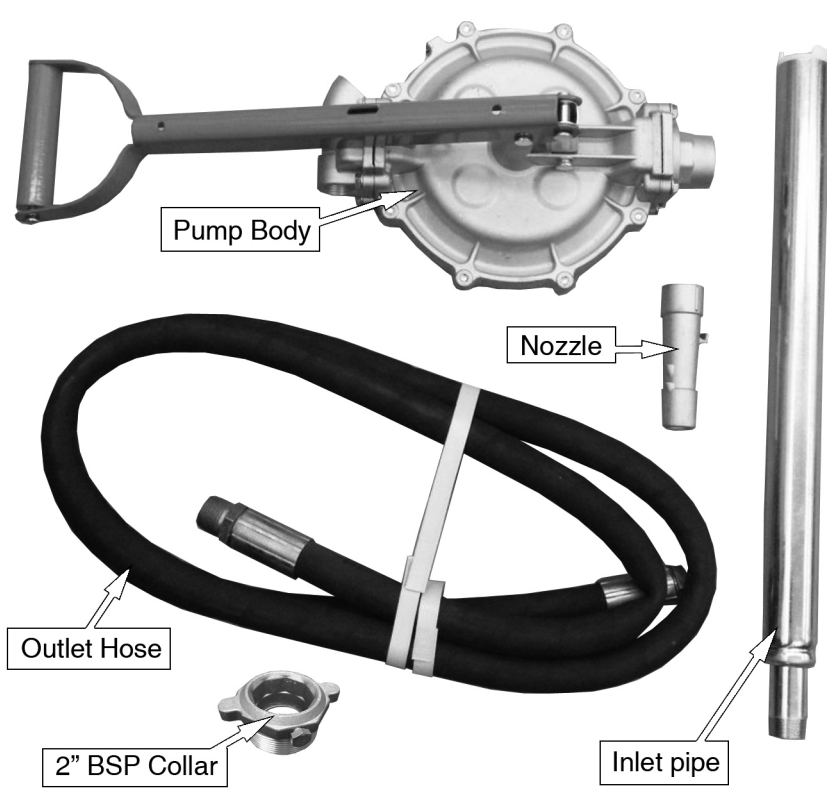

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

ASSEMBLY

WHAT IS SUPPLIED	ASSEMBLED
 <p>Pump Body</p> <p>Nozzle</p> <p>Outlet Hose</p> <p>2" BSP Collar</p> <p>Inlet pipe</p>	

FITTING THE PUMP TO A BARREL

1. Assemble the pump as shown above. Use PTFE tape (not supplied) at all connections
2. Screw the threaded collar into the opening of the barrel.
3. Tighten the collar bolt to the pump body.

USING THE PUMP

1. Make sure all connections are secure and place a suitable container under the spout.
2. Pump the handle to draw fluid from the barrel.
 - The first time you use the pump, liquid should begin flowing after several pumps of the handle

MAINTENANCE

1. If required, remove the inlet tube and carefully clean the filter shown.



CAUTION: DO NOT USE THE PUMP IF THE FILTER IS DAMAGED OR BLOCKED.

