

Clarke®



1.5L OIL EXTRACTOR

MODEL: CHT612

Part No: 1801612

ASSEMBLY & INSTRUCTION MANUAL

CE

LS0309

INTRODUCTION

Thank you for purchasing this CLARKE product

Before attempting to use the product, it is essential that you read this manual thoroughly and carefully follow all instructions given. In doing so you will ensure the safety of yourself and that of others around you, and you can also look forward to the product giving you long and satisfactory service.

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

ENVIRONMENTAL PROTECTION



Do not dispose of this product with general household waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of appropriately.

PARTS & SERVICE

For parts & Servicing, please contact your nearest dealer, or CLARKE International, on one of the following numbers.

PARTS & SERVICE TEL: 020 8988 7400

PARTS & SERVICE FAX: 020 8558 3622

or e-mail as follows:

PARTS: Parts@clarkeinternational.com

SERVICE: Service@clarkeinternational.com

SAFETY PRECAUTIONS

- Make sure that the oil extractor is in perfect condition before use i.e. No cracks which would result in oil leaks.
- When disposing of oil, it must be disposed of according to local regulations. Never pour it down drains.
- When draining oil, make sure that the engine is switched off.
- Warm oil is easier to drain, but make sure the oil is not hot
- Make sure that the oil extractor is on a stable surface.
- If oil is spilt, the area must be cleaned completely and sand or sawdust scattered on the area to absorb the oil and then cleaned up. You should also alert people in the vicinity to the possible danger of slipping.
- **DO NOT** use this equipment with petrol or other flammable liquids or chemicals.
- **ALWAYS** drain and clean the unit thoroughly after use, and store in a clean , dry place.

PARTS IDENTIFICATION



ASSEMBLY

1



1. Slide the bung into the top of the collection container. Make sure it is secure.

2



2. Take the thinner hose and slide the thick section through the hole as shown. Do not slide it all the way through, about 5-7cm should be enough.

3



3. Screw the plunger into position taking care not to over tighten it.

4



4. The Oil Drainer is ready for use.


USING THE OIL DRAINER

1. Place the hose into the oil sump you wish to drain.
2. Make sure the collection container is positioned lower than the oil sump.
3. Raise the plunger up and down to start syphoning the oil into the collection container.



JOINING THE HOSES

If you require a longer hose, simply join the two hoses together as shown.

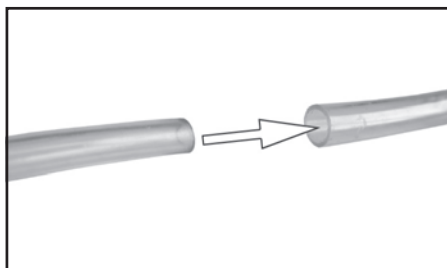

MAINTENANCE AND CLEANING

- Drain and clean the container after use.
 - Do not clean the unit with aggressive detergents or chemicals.
-

SPECIFICATION

Container Capacity 1.5 L

HOSE A

Internal Diameter 5 mm

External Diameter 8 mm

Length 1 m

HOSE B

Internal Diameter 8 mm

External Diameter 10 mm

Length 1.4 m

ADDITIONAL INFORMATION

Below are further Clarke products ideal for fluid/oil extraction, available from your local Clarke dealer.



Clarke CHT588 (Pneumatic Fluid Extractor)

Safely extracts oils, coolants and other fluids from cars, motorcycles, vans/lorries etc.

Part number: 1801588

Clarke COD70 (70 litre oil drainer)

Gravity fed with 2m discharge hose, ideal for professional garage use.

Part number: 7630203



ClarkeOCD8 (8 gallon Oil Drain Cart)

Low entry cart for garage use, ideal for commercial vehicle oil changes etc.

Part number: 3051470

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot.
From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS


Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders..

STARTERS/CHARGERS

All sizes for car and commercial use.

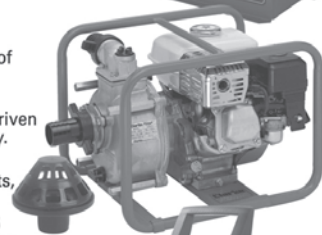

PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hernall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com