

A SELECTION FROM THE VAST RANGE OF



Clarke INTERNATIONAL

For spare parts and servicing, please contact your nearest dealer, or Clarke International on

020 - 8988 - 7400

e-mail: Parts@clarkeinternational.com e-mail: Service@clarkeinternational.com
Hemnall Street, Epping, Essex CM16 4LG

Clarke®



SHELVING UNIT

MODEL No: CS5000C, CS5000B, CS4000C, CS4000B

Part No: 6600490, 6600492, 6600496, 6600498

OPERATING & MAINTENANCE INSTRUCTIONS



These CLARKE shelf units require no screws or fixings for assembly, providing easy and rapid installation - and re-configuration when required.

The steel frame allows for shelf height adjustment , providing excellent versatility.

WARNING:
The MAXIMUM safe working load of each shelf is 100 kg

PARTS LIST



SPECIFICATION

	Dimensions (LWH)	Weight	Max Load per Shelf
CS4000C	914 x 356 x 1372 mm	12.7 kg	100 kg
CS4000B	914 x 356 x 1372 mm	12.7 kg	100 kg
CS5000C	1219 x 457 x 1880 mm	27.1 kg	100 kg
CS5000B	1219 x 457 x 1880 mm	27.1 kg	100 kg

ASSEMBLY

- Take one of the lower posts, simply click plastic brackets to ring on each of the posts.

The brackets locate into the rings on the posts.



NOTE:

The brackets are slightly narrower at one end, the narrow end should be at the top

- Repeat the process with the remaining 3 lower posts, placing the clips at the same height on each post
- Slide the shelf down over the clips, push down on each corner of the shelf to lock into place.
- Screw the upper posts onto the lower posts.
- Using the clips as mentioned, place the remaining shelves into position.
- Each foot can be adjusted to level out the shelving unit.

