



INSTRUCTION MANUAL (GB)

FOREWORD :

We thank you for buying this WinnTec quality product. Before using this product, carefully read these instructions and become acquainted with the safety symbols.

GENERAL SAFETY REGULATIONS (ALSO SEE SAFETY SYMBOLS ON PRODUCTS LABEL) :

- This product is designed and made only for lifting vehicles.
- Never lift loads on sloping, uneven or soft ground.
- Before starting lifting, it is necessary to block the vehicle by placing two wedges by the wheels, as shown on the label.
- Make sure that the vehicle lifting point suggested by the car manufacturer is stable and properly centred on the jack saddle.
- After lifting the load it is absolutely essential to rest it on jack stands.

USE (ALSO SEE SAFETY SYMBOLS ON THE PRODUCTS LABEL) :

- Insert the handlebar into the handle fork of the jack.
- Check if the pressure release valve is closed (turn clockwise).
- Make sure that the vehicle lifting point suggested by the car manufacturer is stable and properly centred on the jack saddle.
- Start lifting and do not exceed the rated load.
- After lifting the load, always place jack stands.
- To lower the jack, remove the jack stands and slowly open the pressure release valve (turn counter clockwise).

MAINTENANCE :

- Keep the jack at minimum height when not in use. Make sure that the pressure release valve is closed.
- Keep the jack clean and check the oil level at least twice a year.

GARANTEE :

This WinnTec product is fully guaranteed against manufacturing defects for a period of 36 months from the date of purchase. If your product proves faulty during the guarantee period, it should be returned to the place of purchase together with the original receipt.