

ROLLER STAND MODEL NO: CARS1

PART NO: 6500980

OPERATION & MAINTENANCE INSTRUCTIONS

ORIGINAL INSTRUCTIONS

LS1117 - ISS 2

INTRODUCTION

Thank you for selecting this Clarke roller stand.


Read this manual before use and save it for future reference.

SAFETY


- Minimum Working Height 690 mm Maximum Load 60 kg.
- Maximum Working Height 1050 mm Maximum Load 45 kg.
- Make sure that the lock handle is properly tightened before use.
- Do not use the stand as a step ladder or scaffold.
- Never use the product if any parts are missing.

ASSEMBLY

ATTACH THE FEET

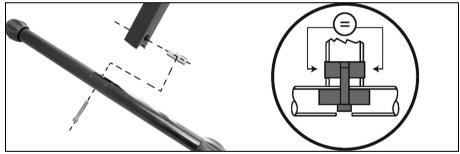

ATTACH THE LOCK HANDLE

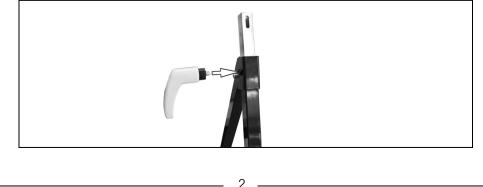


Parts & Service: 020 8988 7400 / E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

ATACH THE ROLLER HEAD

HOW TO USE THE ROLLER STAND

- 1. Open the legs of the stand fully.
 - For increased stability, always push the workpiece over the roller from the rear of the stand as shown.

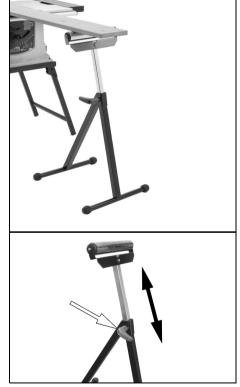

ADJUST THE HEIGHT

- 1. Rotate the lock handle counterclockwise to loosen the roller head.
- 2. Lift the roller head to the correct height (between 690 1050 mm).
- 3. Rotate the lock handle clockwise to lock the roller into position.



This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended. Faulty goods should be returned to their place of purchase, no product can be returned without prior permission.

This guarantee does not affect you statutory rights.

PARTS & SERVICE: 020 8988 7400 E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com SALES: UK 01992 565333 or Export 00 44 (0)1992 565335 CHINERNATIONAL Hemnall Street, Epping, Essex CM16 4LG www.clarkeinternational.com