

Clarke®



INSTANT GARAGE

MODEL NO: CIS788

PART NO: 3503582

ASSEMBLY INSTRUCTIONS

CE


ORIGINAL INSTRUCTIONS

GC0918

INTRODUCTION

Thank you for purchasing this CLARKE Instant Garage. When erected, the CIS788 garage will be of the dimensions show below. Weight is 34 kg packed (32 kg unpacked).

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

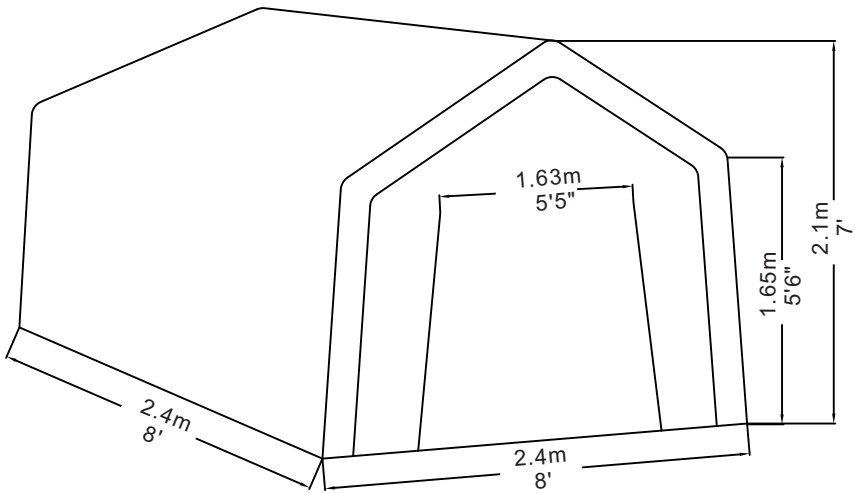

SAFETY INSTRUCTIONS



WARNING: READ ALL SAFETY INSTRUCTIONS TO REDUCE THE RISK OF INJURY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

This garage is a temporary structure and is not recommended as a permanent building.

Choose your garages location carefully. Check for overhead utility lines, branches, etc. DO NOT install near roofs or other structures that may shed snow, ice or excessive run-off onto your garage. Keep away from power cables.

Erect your garage on a level surface.

Have an overview of all parts before attempting installation. Make sure all components are available.

DO NOT use this product in environments for which it is not Intended (i.e. extreme cold, high winds, extreme heat, heavy rainfall, etc).

Always wear safety glasses when assembling this product. Wear gloves when working with tubing to prevent cuts or abrasions.

Proper anchoring and keeping the cover tight and free of snow and debris is the responsibility of the user.

Damage caused by improper anchoring are not covered under warranty.

Keep all flame and heat sources away from the garage fabric. The fabric will burn if left in continuous contact with a naked flame.

DO NOT use open flames or cooking or heating devices inside or in close proximity to the garage, including all types of stoves, gas heaters, gas lanterns, torches, fly killers, etc.

In order to reduce risk of burning and avoid damage, DO NOT- cook, smoke, refuel or use any open flame devices in or around the garage.

DO NOT store flammable liquids (petrol, kerosene, propane, etc.) in the garage, operate gas powered vehicles/equipment in or around the garage.

Keep open flames a safe distance away from the garage.

DO NOT use hard-edged tools or instruments, such as rakes or shovels, to remove snow. These can cause punctures to the cover.

NEVER start the engine of any vehicle or machine inside a closed garage. Ensure that there is adequate ventilation for engines and for any work with paints, cleaners. etc.











 
 



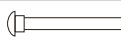
 




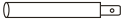


This garage is NOT designed to support heavy snow, Snow or ice accumulation may cause your garage to collapse. To avoid overload, brush snow and ice off the roof top with a broom or mop.

To prevent collapse, damage to property or personal injury, NEVER clear the roof of snow or debris from inside the garage.

DO NOT use bleach, alkaline or harsh detergents for cleaning. Doing so will damage the material. Soap and warm water are recommended.

This temporary garage is designed to offer protection from damage caused by the sun, light rain, light snow, tree sap and bird droppings. It is not designed to shelter equipment from high winds, heavy rain or snow.

COMPONENT PARTS LIST

No	Description	Illustration	Qty
1	Upright Pole with Dimples		6
2	Corner Extension Tube		4
3	Bent Corner Leg		4
4	Shoulder Cross Rail		6
5	Rafter Pole		6
6	Bottom Cross Rail		4
7	Center Extension Tube		2
8	3-Way Side Connector - Left		2
9	3-Way Side Connector - Right		2
10	4-Way Side Connector		2
11	3-Way Peak Connector		2
12	4-Way Peak Connector		1
13	4-Way Cross Rail Clamp		4
14	3-Way Cross Rail Clamp		8
15	Ratchet Tie Down		8
16	M6x45 Bolt		8
17	M6 Nut		8
18	M6 Washer		8
19	Roof Tarp		1
20	Front Door Panel (with zipper)		1
21	Back Panel		1
22	Anchor		4
23	Cable (1' / 30 cm)		4
24	Cable Clamp		4


ASSEMBLY

1. Place all parts from the packaging in a clear area and arrange them on the ground in front of you.
2. Remove all packaging materials and place them back in the box. Do not dispose of the packaging materials until assembly is complete.
3. Check for completeness and for any transport damage.

Tools required for assembly (not included)




Diagram A

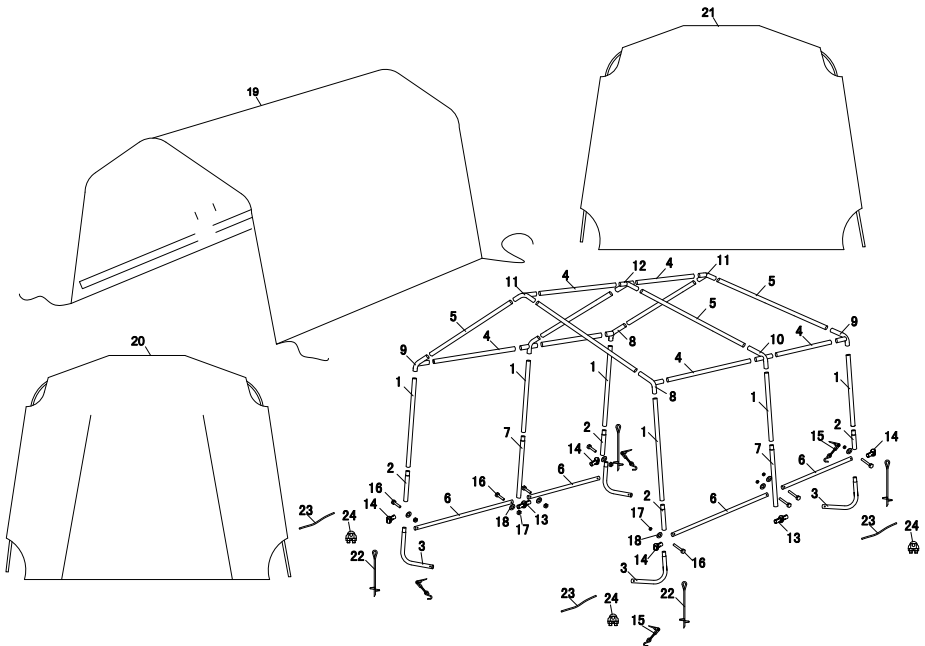

STEP 1: PREPARING THE ROOF PARTS

Select a suitable location for the garage. The layout of the roof parts is shown in Diagram B.

Diagram B

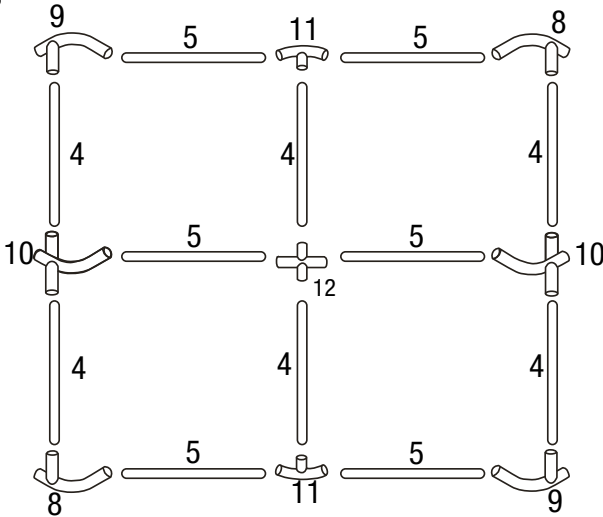


Note the differences between the connectors shown in Diagram C. (connectors are also individually numbered).


Note: When installed, the welded socket for the cross rail must be below the bend.

Parts #8, #9 & #10 are side (shoulder) connectors.

Parts #11 & #12 are top (apex) connectors.

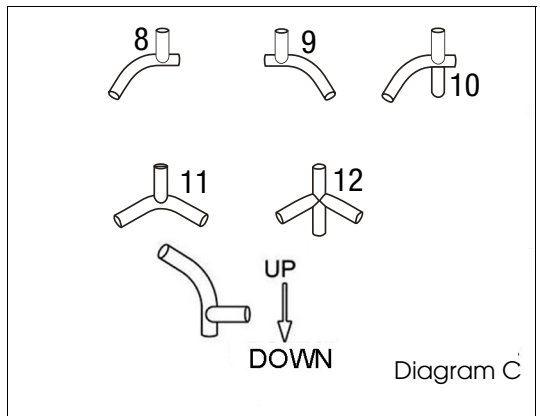

STEP 2: ASSEMBLING THE ROOF

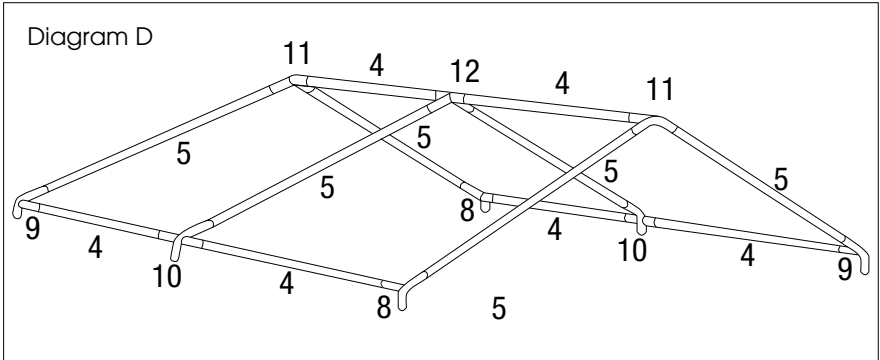

1. Attach the shoulder cross rails (4) to the 3-way side connectors (8, 9) and 4-way side connectors (10). Insert the connectors (8, 9, 10) into the rafter poles (5) to complete the assembly of the roof (Diagram D).



NOTE:


- Be sure that all tubes are fully inserted. Use a rubber mallet if necessary.
- When using the connectors, be sure to remove the protective caps first.

STEP 3: ATTACHING THE LEGS

There are 6 legs for the whole shelter.

1. Follow Diagram E. Connect the tubes #1,2 & #3 to create the 4 corner legs.
2. Connect tubes #1 & #7 to create the 2 center legs.

Diagram E

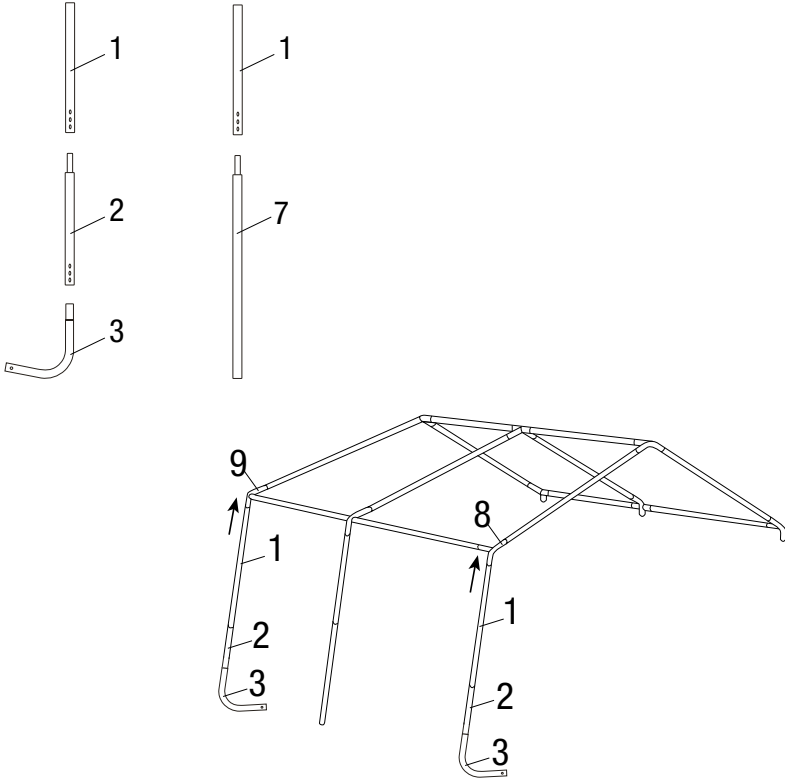


3. Insert the centre legs and corner legs into the side connectors as in Diagram E.
4. Repeat to assemble the other side as shown in Diagram E.


STEP 4: SQUARE AND ANCHOR THE FRAMES

1. Check that the width measurements of the frame are 8' at both the front and back corners, as well as across the center.

Diagram F

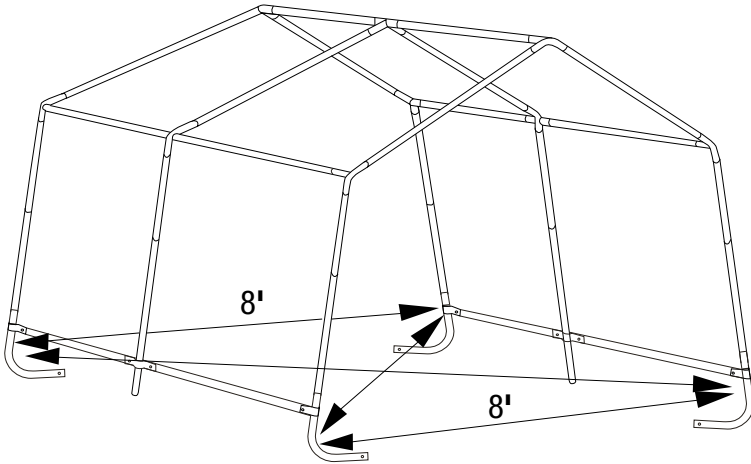

2. Take a diagonal measurement as shown in Diagram F. When these two measures are equal the frame is square. Adjust the frame until they are equal to within 1".
3. Once equal, check the width measurement again to ensure all widths are equal at 8'.
4. Next, install the anchors (Parts #22, #23 & #24) at the 4 corner legs by screwing the removable anchor (#22) into the ground on the inside of the structure.
5. Secure with cable (#23) and cable clamp (#24) (as shown in Diagram G).

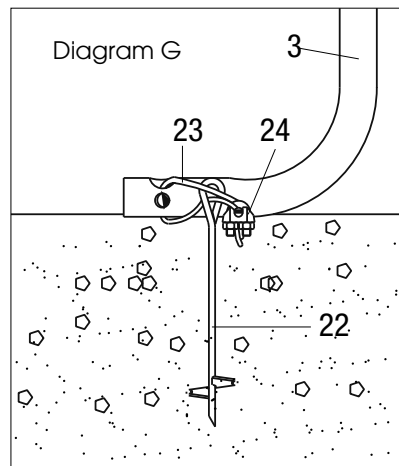

STEP 5: INSTALLING THE FRONT AND BACK COVERS

The front cover has a zippered door to allow entry to the garage. Be sure to locate this cover at the desired end and ensure the zipper is in the closed position while installing.

The back cover is a solid piece of fabric.

The covers are installed in the same fashion.

Diagram H


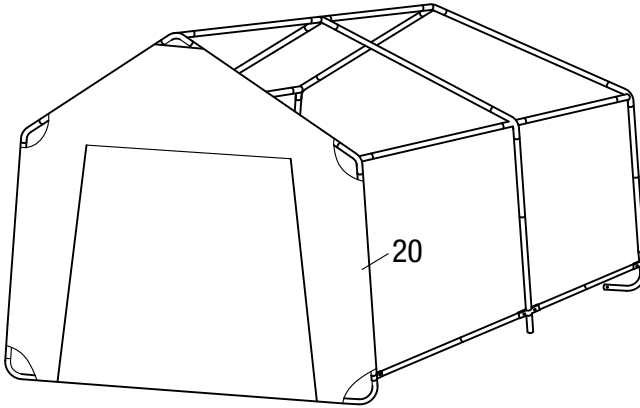


Diagram I

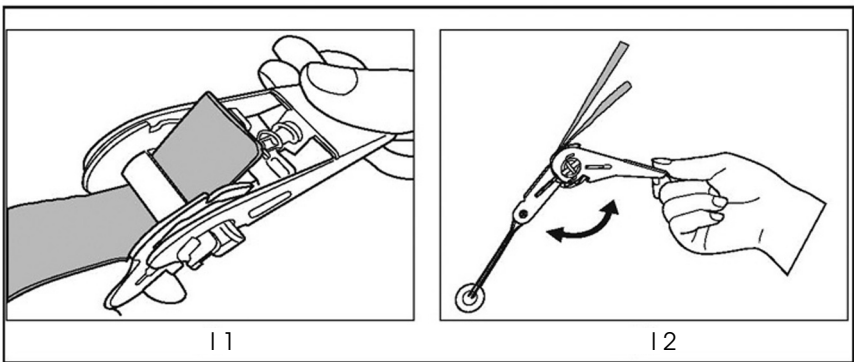

1. Thread the strap through the spindle of the ratchet to make sure the strap will stay in the sleeve when assembled, Raise and lower the handle two or three times to wind the strap onto the spindle (as shown in Diagram I1&I2).
2. Begin with the front cover and first locate the webbed strap that runs around the perimeter at the cover.
 - The webbing is exposed at the peak, the shoulders and the feet of the cover.

Diagram J

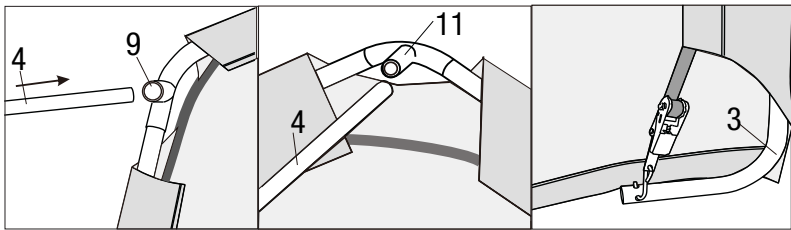
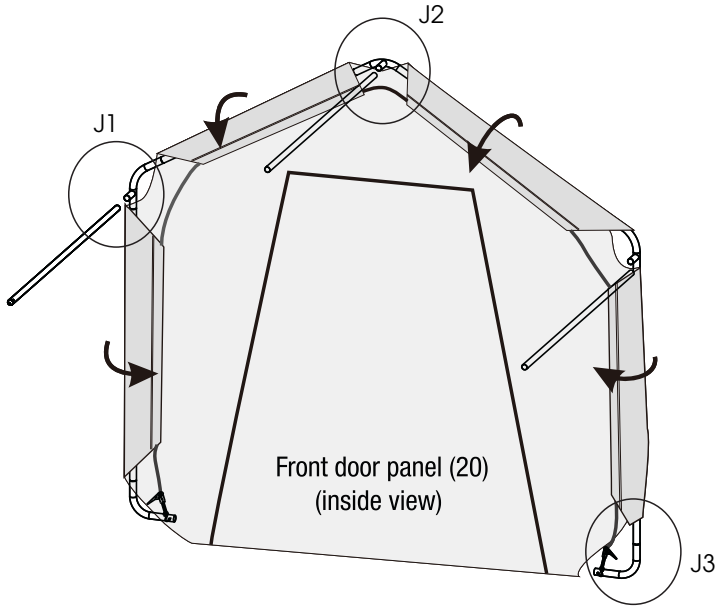


Diagram J1

Diagram J2


Diagram J3

3. Following Diagram J1, disconnect the tube (#4) from the connector (#8, #9, & #11)
4. Wrap the door panel around the tube. Slip the webbing strap between the tubes and then re-connect. (Diagram J2)
5. Hook the pre-assembled ratchet tie down to the frame and tighten until the front cover is reasonably tight. Repeat (Diagram J3) to install the rear panel.

STEP 6: INSTALLING THE MAIN COVER

1. Lay the cover on the ground next to the frame with the inside of the cover (the side with the pockets) facing down and the strap on the front and rear of the frame.
2. Tie a rope to the eyelets on the cover, one each side. Another rope in the middle helps if another person is available.
3. Pull the cover over the frame using the rope as in Diagram K, making sure to centre the cover on the frame. There should be an equal overhang on each corner.

Diagram K

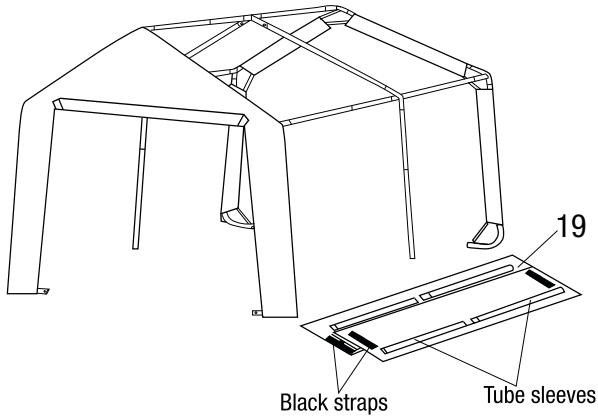

4. Assemble the ratchet tie-down (#15) to the strap ends on the four corners of the cover. Ratchet a few times to draw the strap onto the spool.
5. Insert the hook on the ratchet into the hole on the bent corner leg. Wind the ratchet so that the webbing overlaps itself.
6. Slide the bottom cross rails through the fabric pockets at each leg and re-attach with clamps at each leg. Repeat this on the other side. Push down on the cover rails to tighten the cover before tightening all bolts completely.



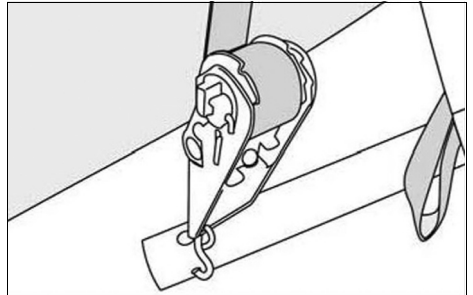


Diagram L

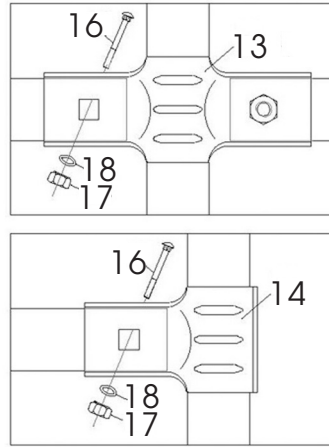

7. When the cover rails are all secured, proceed to the four corners and tighten the end covers to the end frames using the ratchet action.

Diagram M

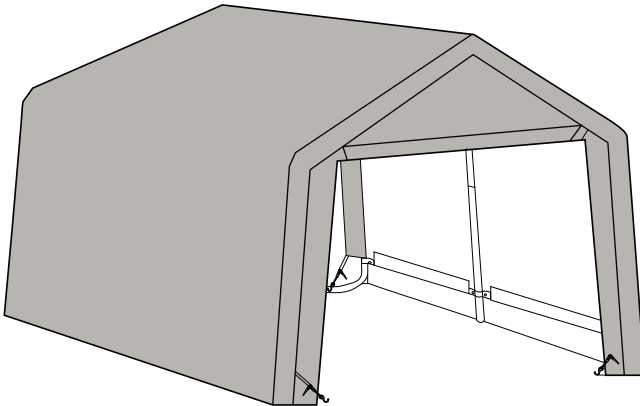


Note: Over-tightening can cause damage to straps and/or the anchor point. Do not over-tighten!

The garage is now ready for use.

Note: Check periodically (two to three times in the first week) and tighten ratchet tie-downs and all hardware as needed. Monthly inspection is recommended throughout usage.

DISASSEMBLY

When disassembling the garage, depress the spring-loaded bar to disengage the ratchet and open the ratchet handle completely to allow the webbing strap to pull through.

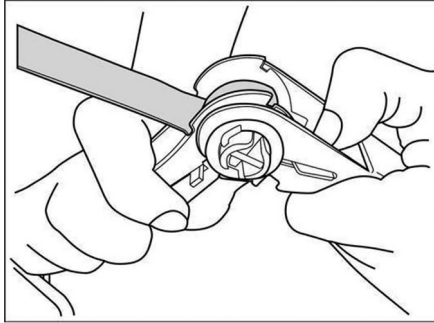

PLEASE RE-READ ALL WARNINGS CONTAINED ON PAGE 2/3 OF THESE INSTRUCTIONS. SAVE THESE INSTRUCTIONS FOR FUTURE USE.

To dismantle, execute all instructions in reverse order.

Store your garage in a cool, dry location between seasons to prolong the usable life of all components.

Components are not equally durable and will require replacement over time at differing intervals.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS


Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.

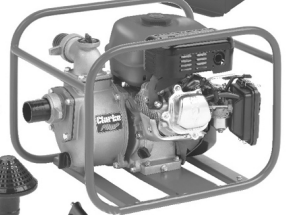

PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com