

Air Cooler with LED Display



IG9703

Batch code:

Please read these instructions carefully before use and retain for future reference

**Before switching on your appliance,
always check for any damage which may have been caused in transit**

CONTENTS

Important Safety Instructions.....	2-3
Specifications.....	4
Appliance Overview.....	4
Operating Instructions.....	5-6
Cleaning and Maintenance	7
Fuse Replacement.....	8
Trouble shooting Guide.....	8
Disposal Information.....	9
Terms and Conditions and Warranty Information.....	10-11

SAFETY INSTRUCTIONS

Carefully read the instructions before operating the unit.
Please retain this manual for future reference.

Important: This product is intended for domestic and light office use **ONLY** and not for commercial, industrial or outdoor use. When using electrical appliances, basic safety precautions should always be followed:

 
1. All electrical repairs must be carried out by a qualified electrician. Inadequate repairs may result in a major source of danger for the user and invalidate the warranty.
2. Do not operate the unit if the plug or cord is damaged, after it malfunctions or has been dropped or damaged in any way, it must be repaired by a qualified electrician.
3. Do not use the heating function if the fan is broken.
4. Use of an extension cord is not recommended with this product.
5. This unit should only be used by adults.
6. Keep the unit and its cord out of reach of children.
7. Children shall not play with the appliance.
8. Cleaning and user maintenance shall not be made by children.
9. The unit should not be used by persons with reduced physical, sensory or mental capabilities.
10. It is not recommended to place this appliance in cupboards, closets, boats, caravans or similar locations.

11. Do not use the unit in a wet room, such as a bathroom or laundry room or in areas where the unit is likely to get splashed.
12. Do not place the unit directly underneath a wall socket when in using Heat Modes.
13. Always place unit on a dry and stable surface.
14. Keep unit at least 1 metre away from TV's and Radio's to prevent interference.
15. Do not cover or obstruct the unit's filter or louvres.
16. Do not insert fingers, pencils or any other objects into the air inlets or outlets of the unit.
17. Do not let chemical substances come into contact with the appliance.
18. It is not recommended to use flammable substances or vapours such as alcohol, insecticides, petrol, etc. whilst the unit is in use.
19. Do not clean the unit by spraying it or immersing in water.
20. Do not unplug the unit while it is working, this could damage the electronic circuits. Always use the control panel to start and stop the unit.
21. Always turn the unit off when not in use by removing the plug from the wall socket; ensuring to pull the plug top and not the cord. Always turn off the unit before cleaning, carrying out maintenance or moving location.
22. Do not pull or place the electrical cable near a source of heat: always unroll it completely to avoid dangerous overheating.
23. The filter must be used with the product at all times, when removing it for clearing always turn the unit off and unplug from the mains wall socket.
24. Always turn off unit, unplug and empty the water tank before placing into storage for a long period of time.

TECHNICAL SPECIFICATION

Model	IG9703
Supply Voltage:	220-240V, 50Hz
Max Output:	55W
Max Airflow Volume:	300m ³ /h
Water tank capacity:	6 Litres
Net Weight:	6.45kg
The maximum room size recommended is 15m ²	

APPLIANCE OVERVIEW

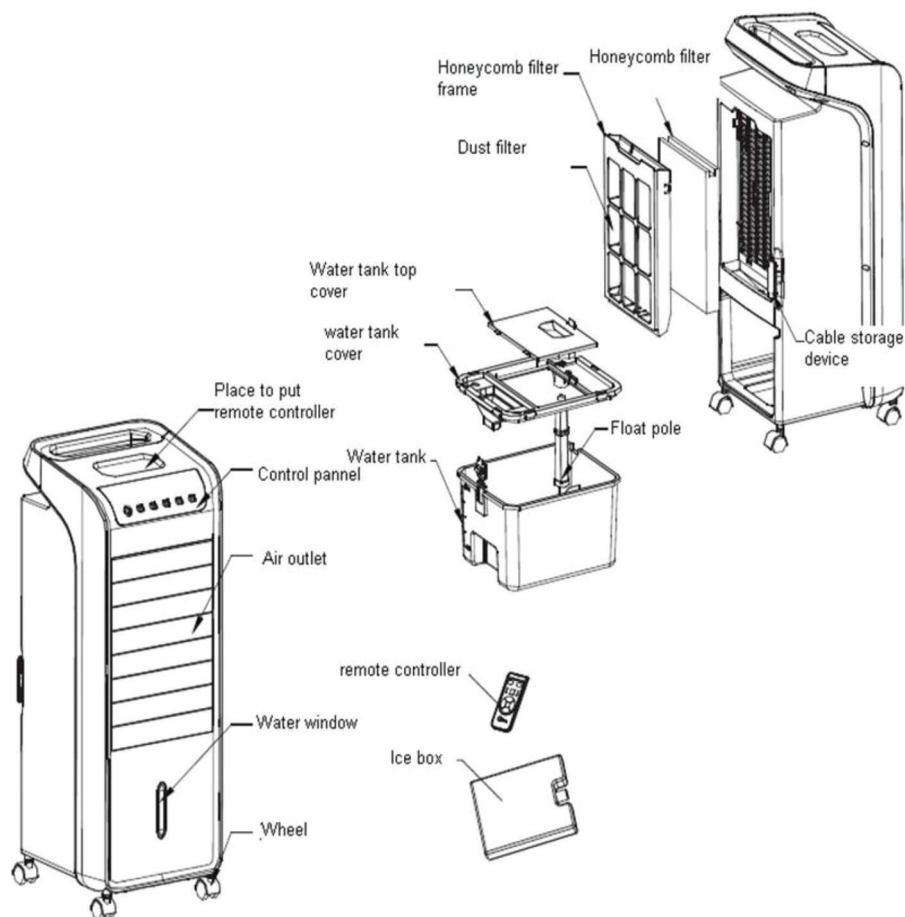

OPERATING INSTRUCTIONS

1. Open the packaging and take out the air cooler.
2. Connect the wheels to the base.
3. Pull out the water tank from the body about 1/3 of the way, and pour water into the tank. If you want to remove the water tank only do so when the power has been switched off for a minimum of 2 minutes.

Attention:

- Pay attention to the water line when filling the tank.
- The water must not be higher than the "MAX" water line. When humidifying, the water must not be lower than the "MIN" water line.
- If you want to increase the cooling effect, you can put the ice or an ice box into the water tank

4. Inset the plug into a mains power outlet and then turn on the power button (ON/OFF).

Attention: After turning on the power, make sure to open the air outlet.

Do not connect the power cord with a wet hand

Control Panel



Buttons:



ON/OFF



Setting timer



Setting mode



Setting fan speed



Oscillation



Humidification

Indicator lights:



ON/OFF



1h 1 hour timer



2h 2-hour timer



4h 4-hour timer



Normal mode



Natural mode



Sleep mode



Low fan speed



Medium fan speed



High fan speed



Oscillation



Humidification (PLEASE NOTE: This unit will only operate as a humidifier in rooms with a high ambient temperature. Use water at room temperature. Do not use the ice packs)

Mode explanation:

Normal Mode - Normal, user adjustable personal setting.

Natural Mode - The fan speed goes up and down plus it turns off and back on again after a while to create a 'Natural' breeze effect.

Sleep Mode - When is set on Sleep Mode, the cycle pattern is:

 
- Sleep Mode with High Speed Setting: High Speed for 0.5 Hour → Medium Speed for 0.5 hour → Low Speed to end
- Sleep Mode with Medium Speed Setting: Medium Speed for 0.5 hour → Low Speed to the end
- Sleep Mode with Low Speed Setting: Stay Low Speed to the end

Ensure that the voltage in your home matches the voltage on the rating plate before using the unit.


Plug the air cooler into an electrical socket and turn on.

Please note the buttons will make a noise when pressed.


1. ON/OFF key: Plug in the power cord; press this button to turn the appliance on / off.
2. Oscillation key: If this key is pressed, the air direction oscillates automatically on a horizontal basis. The oscillation indicator will illuminate. Press this key again to cancel this function.
3. Humidification key: Press this key to start the humidification function, and press this key again to cancel.
4. Setting Mode key: When plugged in the air cooler will default to Normal Mode; If the key is pressed continuously, the air speed will switch in the following manner:



 5. Fan Speed key: the start cooling fan is in high-level running condition; if the key is pressed continuously, the air speed will switch in the following manner:



 6. Timer key: When the air cooler is operating press the Timer key. The timer can be set to operate continuously from between 1 – 7 hours. The time will increase by 1 hour each time the key is pressed. The timer period will switch in the following way:



Once the timer period is set for 7 hours, if the key is pressed again it will cancel the timer function.

Remote Control

 
 
 
 
 
1. Open the remote controller rear cover and insert a CR2032 battery; then the remote controller can be used. It has the same function keys as the control panel
2. The effective distance for the remote controller is 6 meters.

Ice Box

The ice box can absorb the heat in the water, which can lower the temperature of the water tank. It can make the air flow cooler.

1. Take out the ice box and put it into the freezer, until the ice box is totally frozen.
2. Put the frozen ice box into the water tank.

CLEANING & MAINTENANCE

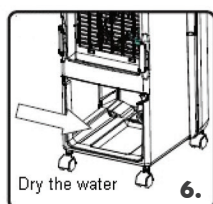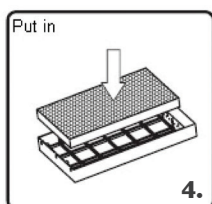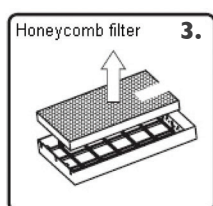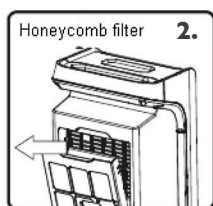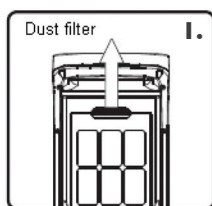

- Unplug the power cord, first remove the Dust Filter. With a mild detergent and a soft brush, scrub the honeycomb filter, clean with clear water and dry, and then replace it to the unit. (Picture 1)
- After cleaning the Dust filter, remove the Honeycomb filter. With a mild detergent and a soft brush, scrub the honeycomb filter, clean with clear water and dry, and then replace it to the unit. (Picture 2~4)
- Unplug the power cord, and then remove the water tank. With a towel dipped with little detergent, wipe away the scale in the water tank, clean with clear water, and then replace it to the unit. (Picture 5)
- Clean the cover with a mild detergent and a soft cloth.

Note:

- Due to high voltage in the unit, be sure to unplug the power cord before cleaning
- No part of the control panel should contact water

 
MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class II)

Remove the fuse cover with a small flat head screw driver.

Take out the fuse and replace with a new fuse of the same

Amp. Replace the fuse cover and push back into place.

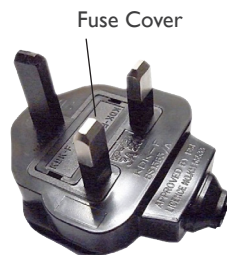

TROUBLE SHOOTING GUIDE

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services:

Problem	Solution
The unit will not switch on	• Check Trip Switch / Fuse • Check if the plug is connected to mains socket correctly • Check batteries in the remote control
Runs for a short while and then switches off	• Check if air outlet is blocked, if so remove obstacle • Check if Timer function has been activated
The unit has been running for a long period and then switches off	• The overheat protection has been activated to protect the motor – turn unit off for a least 10 minutes and then switch back on
Runs without cooling in Cool/Hum. mode and Empty Tank Indicator blinking	• The water tank is empty and needs to be re-filled • Check if the air filter is dirty – if so, clean • Check if air outlets or inlets are blocked
Water is leaking from unit when moving	• Drain the water tank – refer to Cleaning and Maintenance on Page 7 • Ensure rubber drainage plug is securely fitted in water tank • Ensure unit is located on a flat and even surface
The honeycomb filter is blocked with dust.	• Pull down the honeycomb filter and clean it.
The air inlet is blocked with dust	• Remove the foreign matter

DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR

Please quote the Product Code which begins 'IG' or 'DF' and the Batch Code beginning '5' and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**

To register your product, please complete all sections of the form below and return to us at the following address: Igenix, 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR.

Alternatively you can visit the Igenix website and complete the form online.

Customer Details:

Title: _____ First Name _____ Surname: _____

Address: _____

Post Code: _____

Email: _____

Telephone: _____

Product Information:

Product Code (Beginning IG or DF): _____ Product Description: _____

Batch Number (Beginning 5): _____ Serial Number (If applicable): _____

Date of Purchase: _____

Retailer Name: _____

Retailer Location: _____

Please tick here to confirm you have read and accept our Terms & Conditions ☐

Please tick here if you DO NOT wish to receive marketing information from us ☐

Customer Signature: _____ Date: _____

igenix

38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.