

JUMP STARTER

MODEL NO: JSM300

PART NO: 6239005

OPERATION & MAINTENANCE INSTRUCTIONS



ORIGINAL INSTRUCTIONS

LS1117-ISS 1

INTRODUCTION

Thank you for purchasing this CLARKE product.

Please read this manual thoroughly and follow the instructions. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

ENVIRONMENTAL PROTECTION



Do not dispose of this product with general household waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of according to the laws governing Waste Electrical and Electronic Equipment.

SPECIFICATIONS

Model Number	JSM300		
Battery Capacity	12Ah		
Jumpstart Output Current	Starting 300A / Peak 500A		
USB Output	5V @ 2.1A		
DC Output	12V @ 10A, 19V @ 3.5A		
Dimensions (L X W X H)	165 x 80 x 39 mm		
Weight	1 kg		
Engine Capacity	up to 6L Petrol - up to 3L Diesel		

GENERAL SAFETY RULES



WARNING: ALL LEAD ACID BATTERIES GENERATE HYDROGEN GAS DURING NORMAL OPERATION. THIS PROCESS INCREASES DURING A PERIOD OF RAPID DISCHARGE.

WARNING: HYDROGEN GAS AND BATTERY ACID (SULPHURIC ACID) CAN BE EXPLOSIVE, CORROSIVE TO SKIN, EYES AND HAIR, DAMAGING TO CLOTHING AND METALS, FLAMMABLE, POISONOUS TO BREATHE.

- DO NOT leave it exposed to the elements. Avoid direct sunlight, direct heat, rain/moisture etc.
- 2. The device must only be used indoors or completely protected from the rain. This also applies to any device being powered by the device.
- 3. Do not operate the device if any of the cables are damaged. Consult your Clarke dealer for repair or replacement of the parts.
- 4. Do not operate the device if the case is damaged. Consult your Clarke dealer or a qualified person for inspection and repair.
- 5. To prevent the battery from overheating and consequent damage, do not exceed our recommendations for the duration of jump starting.
- The unit is NOT designed to be used as a replacement for a vehicle battery.
- 7. NEVER allow the battery to become completely discharged.
- 8. NEVER jump start the engine whilst the unit is being charged.
- NEVER attempt any repairs yourself. If you have a problem with the unit contact your local CLARKE dealer.
- Always keep your body and clothing dry. Never work in a damp area without adequate insulation against electric shock.
- 11. Always store the unit out of reach of children.
- 12. Always wear safety glasses when working with lead acid batteries.
- 13. If splashed by battery acid, immediately flush the area of the splash with clean water. If a burning sensation is felt or any blistering occurs, seek medical help.
- 14. If battery acid comes into contact with the eyes, flush the eyes with clean water continuously and seek medical help.
- 15. Always ensure that there is air circulating around the unit when in use.
- 16. When not in use, store in a safe dry place.

- 17. Never allow the jumpstart leads, to touch each other or to touch the same metal object.
- Ensure the vehicle battery posts and battery clamps are perfectly clean before use.
- 19. Connect the red clamp to the unearthed battery terminal first, (this is usually the positive (+ve) terminal and coloured RED); then connect the black clamp to the earthed battery terminal, (this is usually the negative (-ve) terminal and coloured BLACK).
- 20. ALWAYS wear suitable protective clothing and eye protection when working with lead acid batteries.
- 21. NEVER allow the cables to become wrapped around the operator or any other person.
- 22. Wipe the body of the unit clean using a soft damp cloth, do not use abrasives to clean this product.

ELECTRICAL CONNECTIONS

This device is supplied with a 13 amp, 230 volt (50Hz), charging adaptor for connection to a standard, domestic electrical supply.


This appliance is of double insulated design. No earth conductor is provided.

If in any doubt, consult a qualified electrician. DO NOT attempt any electrical repairs yourself.

SAFETY SYMBOLS

	Class II appliance (mains adaptor only)	HERAD	Always read instructions before use
	Suitable for indoor use only (refers to mains adaptor only)	X	Subject to Waste Electrical & Electronic Equipment Directive
○• •	Live centre pin		Class III appliance (main unit only)

OVERVIEW

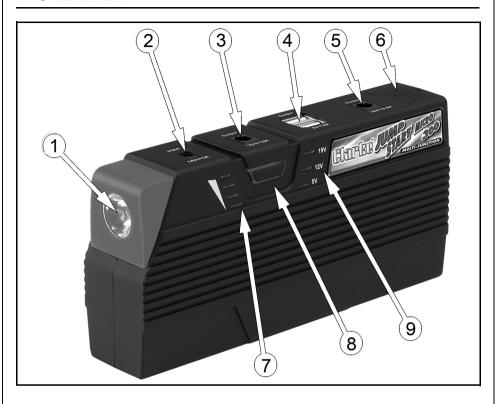

NO	DESCRIPTION	NO	DESCRIPTION
1	Worklight	6	Jumpstart Lead Socket
2	Charger Input Socket	7	Power Indicator Lights
3	12V DC Output Socket	8	On/Off Button
4	USB Sockets 5V DC	9	Supply Voltage Indicator
5	19V DC Output Socket		

 
TO CHARGE THE POWER PACK

You can recharge the power pack using:

- The mains charger (A) or
- The cigar lighter adapter (B).




- Plug the mains charger or cigar lighter adapter into the charger input socket
- 3. If you are using the cigar lighter adapter, start the engine.
- Connect the other end to either the mains supply or cigar lighter socket.



TO GET THE MAXIMUM LIFE FROM THE BATTERY

- Charge this device before first use.
- Recharge after every use or a minimum of every 3 months.
- Do not leave the unit in a state of discharge.

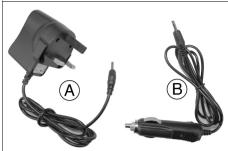




OPERATION

WORK LIGHT

 
- Push and hold the ON/OFF button for 3 seconds to turn the work light on.
- 2. Push the ON/OFF button again.
 - The work light flashes on and off.
- 3. Push the ON/OFF button again.
 - The work light flashes with the morse code SOS pattern.



Worklight



- This will supply a maximum of 2.1A at 5V.
- Put the USB cable into one of the USB sockets.
- Connect the other end of the cable to your device.
 - The supplied lead has 4 plugs on one end which can be used to charge a variety of devices.
- 3. Push the ON/OFF button to start supplying power.
 - This supplies a maximum of 2.1A at 5V.

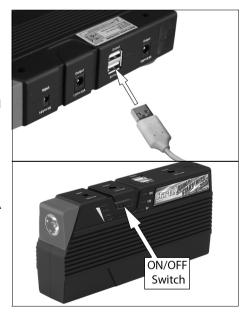

ON/OFF

Switch




DC POWER SUPPLY

 Insert the small fly lead into the power pack.

- 2. Install the connector you need onto the other end of the fly lead.
- 3. Insert the connector into the device you want to power.

4. Push the ON/OFF button to start supplying power.

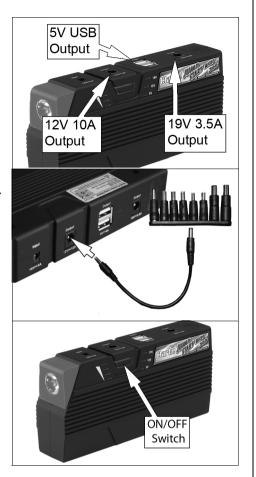

JUMP STARTING



WARNING: SOME VEHICLE ELECTRONIC EQUIPMENT MAY BE DAMAGED BY JUMP STARTING. ALWAYS CHECK WITH THE VEHICLE HANDBOOK.

NOTE: This device will not jumpstart a vehicle if the battery is very low or completely flat.

CONNECTING THE SMART CABLE TO THE POWER PACK

- When jumpstarting, a minimum of 3 of the power indicator lights located on top of the device must be lit. Recharge the device if required.
- Lift the rubber plug and insert the EC5 connector of the smart lead into the power pack.
 - The red & green LEDs on the smart lead flash alternately.





CONNECT THE JUMP START LEADS TO THE BATTERY

- 1. Connect the red clamp to the unearthed battery terminal first, (this is usually the positive (+ve) terminal and coloured RED).
- 2. Connect the black clamp to the earthed battery terminal, (this is usually the negative (-ve) terminal and coloured BLACK)
- 3. Once you have connected the leads you have 30 seconds to try and start the vehicle, otherwise you will need to remove the leads and reattach them

SMART CABLE STATUS LIGHTS

STATUS	Green LED	Red LED	Beeping
Detecting	Flashing	Flashing	No
Ready to start	Solid	Off	No
Low Voltage	Off	Solid	No
High Voltage	Off	Solid	No
Short Circuit	Off	Flashing	Yes
Reverse Polarity	Off	Flashing	Yes
Reverse Charge	Solid	Solid	Yes
Over heating	Off	Solid	Yes
No operation within 30 seconds of connecting to the battery terminals	Solid	Solid	No

JUMPSTART THE VEHICLE BATTERY



CAUTION: MAKE SURE THAT AT LEAST 3 POWER INDICATOR LIGHTS ARE LIT BEFORE YOU ATTEMPT TO JUMPSTART.

ALWAYS carry out the following preliminary checks:

- Switch off the vehicle ignition and ALL ancillary equipment (lighting, radio etc.)
- Ensure the vehicle battery is rated at 12V and is not damaged in any way.
- Ensure the area is well ventilated.
- Make sure that the device is at least 60% charged (3 power indicator lights are lit).

NOTE: This device will not jumpstart a vehicle if the battery is very low or completely flat.

- Switch the ignition to 'start' FOR A MAXIMUM OF 6 SECONDS). If the engine does not start within this time, SWITCH OFF the ignition and WAIT FOR AT LEAST 3 MINUTES BEFORE TRYING AGAIN.
- 2. Once the engine is running, disconnect the clamps within 30 seconds, BLACK clamp FIRST, then disconnect the RED clamp.
- 3. Leave the vehicle engine running for a while to let the alternator recharge the battery.

DECLARATION OF CONFORMITY





Hemnall Street, Epping, Essex CM16 4LG

DECLARATION OF CONFORMITY

This is an important document and should be retained.

We hereby declare that this product(s) complies with the following directive(s):

2014/30/EU

Electromagnetic Compatibility Directive.

2014/35/EU

Low Voltage Equipment Directive.

2011/65/EU

Restriction of Hazardous substances.

The following standards have been applied to the product(s):

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013, EN 61000-6-3:2007+A1:2011,

EN 61000-6-1:2007, EN 55015:2013+A1:2015, EN 61547:2009.

The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the aforementioned directive(s) has been compiled and is available for inspection by the relevant enforcement authorities.

The CE mark was first applied in: 2017

Product Description:

Jump Starter 12000 mAh

Model number(s):

JSM300

Serial / batch Number:

N/A

Date of Issue:

29/11/2017

Signed:

J.A. Clarke

Director

D.O.C _16_0529 Jump Starter12000mAh _(rv1)

Page 1 of 1



PARTS & SERVICE: 0208 988 7400

E-mail: Parts @ clarke in ternational.com or Service @ clarke in ternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

CIAPEC INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG www.clarkeinternational.com