



INSTRUCTIONS FOR:

MOTORCYCLE FORK SPRING COMPRESSOR

MODEL NO: **MS1824.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to the instruction manual



Wear eye protection



Wear protective gloves

1. SAFETY

- x **DO NOT** use the spring compressor for a purpose it is not designed to perform.
- x **DO NOT** use the spring compressor if it is damaged.
- x **DO NOT** make any modifications to the spring compressor.
- ✓ Maintain the spring compressor in a good clean condition for the best and safest performance.
- ✓ When not in use, store in a dry location away from children.

2. INTRODUCTION

Designed to relieve fork spring tension allowing removal of the tube caps from the rod, without damaging the threads. Can be used with the fork in situ or on the bench. Fits most modern road motorcycles. Use with 17mm socket.

3. SPECIFICATION

Model No:.....**MS1824.V2**
 Maximum Reach:..... 750mm
 Maximum Fork Tube Diameter: .Ø32mm

4. OPERATION

Always refer to the original manufacturer's manual for assembly and disassembly of motorcycle forks.

- 4.1. Clamp the fork spring compressor horizontally or vertically in a vice using the utility bracket.
- 4.2. Adjust the fork spring compressor length to suit the fork length approximately.
- 4.3. Remove the nut at the top of the fork.
- 4.4. Locate the bottom of the fork on the compressor pin.
- 4.5. The two screws on the tool are to align with the two holes in the fork internal sleeve. The fork internal sleeve is an aluminium alloy; location of the screws and holes is required only. **DO NOT** apply force to the internal sleeve when locating.
- 4.6. Using a 17mm socket, tighten the tool pulling down the collar and the spring, which allows access to the nut holding the fork cap in place.



Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group,
 Kempson Way, Suffolk Business Park,
 Bury St. Edmunds, Suffolk,
 IP32 7AR

01284 757500

01284 703534



www.sealey.co.uk



sales@sealey.co.uk