
GALAXY-PRO 6K - User manual



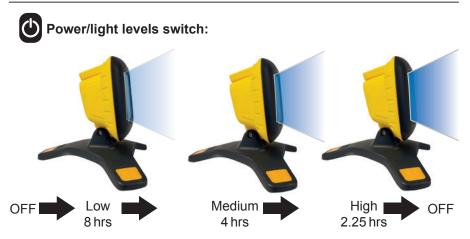


To dim the light, switch the light level to High and hold the power switch for 3 seconds and release at the desired light level. (Lowest level operates for 60 hrs).


Battery status indicator:

- Flashing amber (steady flash) when battery level is low.
- Flashing red when the unit needs charging.

The Galaxy Pro can also run from its AC Charger on Low light level (indoor use only).

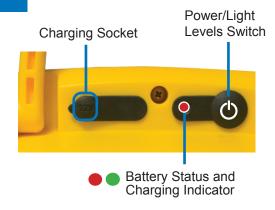

Charging Options:

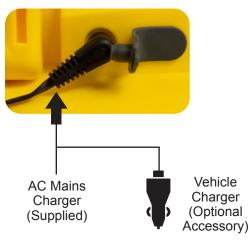

Battery charging indicator:

- Red light while charging
- Green light when charged

Recharge is approximately 8 hours.





Hi-Vis reflective feet



NightSearcher Limited Unit 4 Applied House, Fitzherbert Spur, Farlington, Portsmouth, Hampshire, PO6 1TT, UK

T: +44 (0)23 9238 9774

E: sales@nightsearcher.co.uk

All NightSearcher products have a 3-year standard warranty on all manufacturing defects and 1-year warranty on all rechargeable batteries from the date of purchase.

For extended 5 year warranty please visit www.nightsearcher.co.uk proof of purchase is required.













Two Magnetic Mount Choices:

NightSearcher

Optional Accessories:

2m Stainless Steel Tripod:

Extends from 0.8 to 2 metres Product code: SPTRIPODSS2M



Vehicle Charger:

Product code: CHIC8.4-LI-ION

