



SAFETY CLEAR SPECTACLES

(WITH ADJUSTABLE ARMS)

MODEL NO: SCS1

PART NO: 8133814

USER INSTRUCTIONS



ORIGINAL INSTRUCTIONS

DL0722 REV 1

INTRODUCTION

Thank you for purchasing this CLARKE product.

Before attempting to use this product, please read these instructions carefully. In doing so you will ensure your safety and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose. Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

SPECIFICATIONS

Optical class: 1

Material lenses: Polycarbonate

Frame: Nylon

MARKINGS ON THE PRODUCT

F:- protection against low energy impact (45m/s) from high-speed particles at room temperature only

MATERIALS DECLARATION

No parts of this product is made of materials that are known to cause skin irritation. However, materials that come into contact with the skin can cause allergic reactions to certain susceptible individuals.

USING SAFETY SPECTACLES


APPLICATION

These safety spectacles are designed for eye protection against moderate impact hazards but are not unbreakable and do not provide unlimited eye protection. They are designed to protect the user against eye injuries through impact of flying particles or droplets. The safety spectacles are not intended for welding use.

The safety spectacles have been designed for your personal safety and must be worn for the whole duration of exposure to hazards.

You should leave the work area if dizziness or eye irritation occurs or if the spectacles become damaged.

The safety spectacles can be quickly adjusted for a secure, comfortable fit by extending the telescopic side arms.

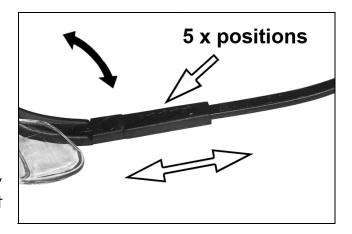

SAFETY WARNINGS


- 1. Do not modify or alter the safety spectacles in any way.
- 2. Pitted or scratched lenses reduce vision, seriously reduce protection and the safety spectacles should be replaced immediately.
- 3. Materials that come into contact with the skin can cause allergic reactions to certain susceptible individuals.
- 4. If in doubt, check with supervisory personnel to ensure you have the correct level of protection relative to working conditions. If necessary consult relevant European Standards.
- 5. The clear lenses of these safety spectacles offer no protection against optical radiation given off during welding or cutting work.

CLEANING, MAINTENANCE AND STORAGE

- 1. Do not use abrasive materials for cleaning the safety overglasses. Always clean either with optical cleaning solution, a cleaning solution very low in alcohol or in warm soapy water. Rinse and dry with a soft cloth.
- 2. Parts that come into contact with the skin of different users may be regularly disinfected.
- 3. It is recommended to store the glasses in a clean, dry polythene bag when not in use. Store in a dry place sheltered from UV light, ideally in a protective case. Ideally, this should be between 5°C and 40°C.
- 4. If the lenses become damaged the overglasses must be replaced.

DECLARATION OF CONFORMITY



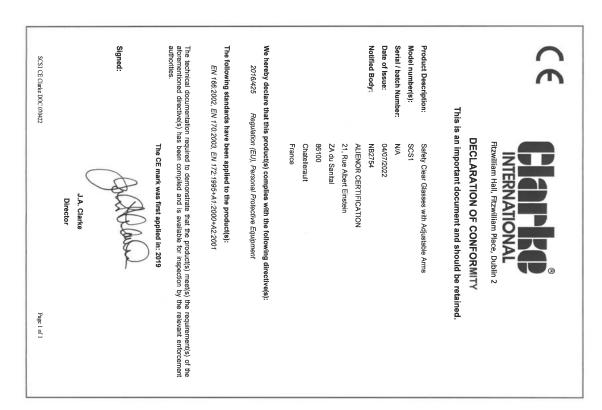

Parts & Service 0208 988 7400 E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com Clarke International, Hemnall Street, Epping, Essex CM16 4LG