

Clarke®



© 0105

Jumpstart 4000

Part Number 6240030

Operating & Maintenance Instructions



Parts and Service

For Spare Parts and Servicing, please contact your local dealer, or
Clarke International on one of the following Numbers:

Parts and Service Tel: 020 8988 7400

Parts and Service Fax: 020 8558 3622

or e-mail as follows:

Parts: Parts@clarkeinternational.com

Service: Service@clarkeinternational.com

If you have any problems using your Jumpstart, call the
Clarke Helpline on,
020 8988 7400

Spare Parts (Ref. Fig.1, page 3)

No.	Description	Part No.
1	Positive Battery Connection Lead	HT400001
2	Lamp Assembly	HT400002
-	Lamp bezel and lens	HT400003
4	230 Volt Charger complete	HT400004
5	Cigar Lighter adapter - 12V charge lead	HT400005
6	ON/OFF Switch	HT400006
7	Voltage Meter	HT400007
11	Negative Battery Lead	HT400011
-	Battery 12V	HT400012

Copyright Clarke International: All rights reserved. Dec 1999

Thank you for purchasing this Clarke Jumpstart. Before using please read these instructions. This is for your own safety and that of others around you, and to help you achieve long and trouble free service from the Jumpstart unit.

Guarantee

This product is guaranteed against faults in manufacture for 12 months from purchase date. Please keep your receipt as proof of purchase. This guarantee is invalid if the product has been abused or tampered with in any way, or not used for the purpose for which it is intended. The reason for return must be clearly stated. This guarantee does not affect your statutory rights.

Features and Use

The Jumpstart 4000 is a rechargeable 12 Volt power supply which can be used to start a car in the event of a flat battery. The unit can also be used to power such things as Mobile Phones, Radios, Electric Coolers etc., via a cigar lighter type socket. The unit also incorporates a built in lamp and may be used as a stand alone light source.

An audible warning will sound in the event of low battery voltage, or if the clamps are incorrectly fitted for jump starting (wrong polarity).



Fig. 1

- 1 **Positive Battery Connection Lead** to connect to positive the battery terminal
- 2 **Lamp** to provide light for roadside repairs or emergency situations
- 3 **12 DC Socket** connects the 230 Volt charger to allow mains charging
- 4 **230 Volt Charger** to charge the internal battery pack
- 5 **Cigar Lighter Adaptor** complete with 5 Amp fuse.
- 6 **ON/OFF Switch**
- 7 **Voltage Meter** to indicate the voltage level of the units battery
- 8 **Cigar Lighter Socket** for use with the cigar lighter adapter provided (Item 4)
- 9 **Voltage Test Switch** press to indicate the internal batteries power level
- 10 **Lamp ON/OFF Switch** switches the lamp ON or OFF
- 11 **Negative Battery Connection Lead** to connect to the negative battery terminal

Specifications

Model Number Jumpstart 4000
Part Number 6240030

Battery Type Sealed, Lead Acid,
..... Rechargeable,
..... Maintenance Free
..... 12V DC
..... 38 AH
Voltage Output 12 Volts DC

Safety Precautions

- **NEVER** allow the negative and positive leads, on this unit, to touch or to touch the same metal object.
- Although the Jumpstart is water resistant and may be used outdoors, DO NOT leave it exposed to the elements. Avoid direct sunlight, direct heat, rain/moisture etc.
- The Jumpstart is designed for use with 12V systems ONLY.
- Do not operate the Jumpstart if any of the cables are damaged. Consult your Clarke dealer for repair or replacement of the parts.
- Do not operate the Jumpstart if the case is damaged. Consult your Clarke dealer or a qualified person for inspection and repair.
- Ensure the vehicle battery posts and battery clamps are perfectly clean before use.
- When connecting the Jumpstart leads to a battery, ensure the ON/OFF switch is OFF, and **ALWAYS** connect the RED, (positive, +ve) output conductor to the **UNEARTHED** battery terminal **FIRST**, then connect the BLACK, (negative, -ve) conductor to the chassis or suitable engine bolt, well away from the battery and fuel line.
- To prevent battery overheating and consequent damage, do not exceed our recommendations for jump starting.
- When jumpstarting ensure the area is well ventilated.
- ALWAYS wear suitable protective clothing and eye protection when working with lead acid batteries.
- The Jumpstart is NOT designed to be used as a replacement for a vehicle battery.
- DO NOT attempt to BOOST CHARGE the Jumpstarts' sealed battery.
- DO NOT allow the battery, at any time, to become completely discharged.



WARNING! It is possible that some electronic equipment could be damaged by jump starting. ALWAYS check with the manufacturers handbook to determine

Battery Charging

IMPORTANT!

1. Charge your Jumpstart battery before using for the first time. (See 'A' below).
2. Recharge the battery after every use.
3. Recharge the battery every 3 months
4. NEVER leave your Jumpstart 4000 battery in a state of discharge.

Follow the above rules to ensure maximum working life from your Jumpstart battery

Two means of charging the battery are provided.

Fig. 2

1. Via a 230V supply, using the 230V charger with cable and DC plug provided, shown in fig.2.
2. Via a 12V vehicle supply using the cigar lighter adapter with cable and plug provided, shown in fig.2.

A 5Amp fuse is fitted into the cigar lighter plug adapter, accessed by unscrewing the end cap of the adapter. Take care not to loose the spring when unscrewing the cap.

NOTE : Using a 12V vehicle supply, the battery will not charge to its maximum, but only to approx. 50% of its capacity.



A. Charging using the 230 Volt Charger


Fig. 3

1. Plug the cable into the socket at the front of the unit, then the charger in to the mains supply and switch ON. The red LED will illuminate to denote charging is in progress.
2. Continue to charge until the RED charging light goes OUT. **It is important to note that this could take several days, depending upon the state of charge of the battery.**

NOTE: Pressing the 'TEST' button, with the charger disconnected, will cause the needle on the voltmeter to register the state of charge of the battery.

Once the charger is disconnected, it will be noted that the voltage will slowly settle back. This is quite normal and should not cause alarm.

When the LED extinguishes, charging will automatically stop, indicating that the battery is at maximum capacity,

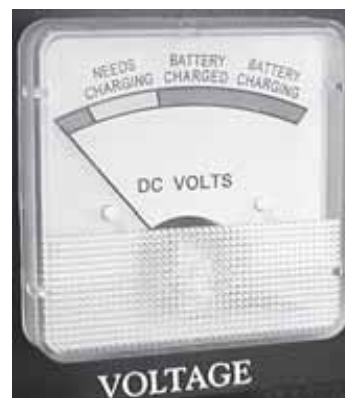

IMPORTANT! DO NOT allow the needle to enter the RED zone as this could damage the battery

B. Charging using the 12 Volt Adaptor

1. Plug the cable into the socket at the front of the unit, then into the cigarette lighter receptacle on the vehicle and start the engine. The green LED will illuminate on the adaptor, and the red LED on the charger to denote charging is in progress.
2. Continue to charge until the voltmeter registers 'Battery Charged' when the 'TEST' button is pressed, **WITH THE CHARGING CURRENT DISCONNECTED**. i.e., disconnect the cigarette lighter adaptor from the receptacle on the vehicle before pressing the TEST switch.

NOTE:

We recommend that you use this system only when necessary, as prolonged use will reduce the life expectancy of the battery, due to the fact that this method can only charge the battery to approx. 50% of its capacity.

For maximum battery life, we strongly recommend that you maintain the battery in a fully charged state at all times.

If charging does not take place, check the green LED on the adaptor. If extinguished, check the 5 Amp fuse within the cigar lighter adaptor plug. Ensure all connections are clean and free of grease etc.

Jump Starting

ALWAYS carry out the following preliminary checks before connecting the Jumpstart to the battery:

- Ensure the vehicle ignition and ALL ancillary equipment - lighting, radio etc., is switched OFF.
- Ensure the vehicle battery is rated at 12V and is not damaged in any way.
- Ensure the battery terminals are perfectly clean and the clamps are firm and perfectly secure.
- Remove vehicle battery filler plugs and check electrolyte level. If necessary, top up with distilled water.

When completely satisfied, proceed as follows:

1. **IMPORTANT! ENSURE THE JUMPSTART ON/OFF SWITCH IS IN THE OFF POSITION**, then connect the red clamp to the unearthed battery terminal first, (on most vehicles, this is usually the positive (+ve) terminal and painted RED), then the black clamp to the chassis or engine bolt, well away from the fuel lines or moving parts, ensuring the connections are firm and secure.

If the polarity is incorrect, and audible warning will sound. Disconnect IMMEDIATELY and reverse the clamp connections.

Switch the vehicle ignition ON, and leave in this condition **FOR APPROX TWO MINUTES**. (This will provide the vehicle battery with a short 'boost' charge to allow for easier starting).

Switch the ignition to 'start', for NO MORE than 6 seconds.

If the engine does not start, within this time, SWITCH OFF the ignition and wait for at least 3 minutes before trying again.

Once the engine is running, disconnect the earthed clamp FIRST i.e. that connected to the chassis or engine bolt etc., and return it to its storage position, then disconnect the unearthed clamp, from the battery terminal, and restore to its storage position.

As soon as possible after use, recharge the Jumpstart battery. If the battery is allowed to remain in a discharged state, its life may be shortened.

Using as a 12Volt Power Supply

The unit has a cigarette lighter type socket located on the side of the casing (see Fig. 1, 8). that allows connection via a standard DC connector to other DC electrical equipment.

⚠ WARNING: Be Aware that a fully charged 12V battery can have an output of approx. 13.5V. Consult the appliance handbook to ensure it is safe to operate from a 12V battery.

The table below indicates the approx. operating time from a fully charged battery.

Estimated Operating Period Provided

Estimated Use	Electrical Appliance
30 Hours	Cell Phones
21 Hours	Radios, Fans
12 Hours	Camcorder, VCR, Spotlight
7 Hours	Electric Tools, Bilge Pump

Maintenance

Always inspect the Jumpstart before use to ensure the cables are in good condition, and the clamps are clean and free from corrosion. Have them replaced if any damage is apparent.

Keep clean by wiping with a dry cloth. DO NOT use solvents as a cleaning agent.

NOTE: When the battery is in a low state of charge, an audible warning will sound

1. Changing the Battery

1. Unscrew and remove the 8 self tapping screws securing the back cover. Lift off the cover to expose the battery and other components.
 2. Lift out the battery from the battery compartment, and detach the heavy duty, and other cables, from the battery terminals.
 3. Taking great care not to short across the battery terminals, connect the RED heavy duty cable, and other cable with red sheath, to the battery terminal painted RED, and the black cables to the other battery terminal.
 4. Gently slide the new battery into position in its compartment, taking care not to damage the printed circuit board
- Replace the back cover and secure with the 8 self tapping screws.

2. Changing the Light Bulb

1. Gently squeeze the sides of the lens bezel together, or very carefully use a screwdriver to disengage the clips at either side, and pull the lens and bezel out.
2. Unscrew and remove the burned out bulb and screw in a replacement.
3. Snap the lens and bezel back into place and replace the back cover.